



# ELK STARTER ROLL

Eave And Rake Starter Material With WindGuard® Sealant



## ELK STARTER ROLL:

- Manufactured with standard oxidized asphalt.
- Fiberglass-reinforced.
- Granular surfaced.
- Features Elk WindGuard sealant to guard against wind uplift.
- Nail-down starter material.

## USAGE:

- Eave and rake starter material for composition roofing.

## APPROVALS:

- ASTM D3903
- FBC 4710

## PACKAGING:

- Roll Sizes: 7.875" x 25' (20 cm x 7.62 m)
- 150 Rolls Per Pallet

Elk Starter Roll is fiberglass-reinforced with a granular surface designed for use under composition shingles and nail-down applications. It also features Elk WindGuard sealant to guard against wind uplift. For technical information contact 888.743.4527.

**Plant Location:**  
3441 S. Willow Ave.  
Fresno, CA 93725  
559.499.2222

©2006 Elk Premium Building Products, Inc. All rights reserved. All trademarks designated ® are registered trademarks and all trademarks designated ™ are other trademarks of Elk Premium Building Products, Inc., an ElkCorp company (NYSE:ELK), or its subsidiaries.




# ELK STARTER ROLL


## Eave And Rake Starter Material With WindGuard Sealant

### Application Instructions

- Starter roll for use under composition shingles.
- Surface should be clean and dry.
- For best results, apply in 50° F (10° C) and rising.
- Nail with 3/8" (0.95 cm) minimum head roofing nails, 12" (30.5 cm) on center, 4" (10.16 cm) above edge of roof.

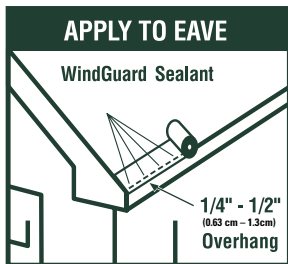

**EAVE APPLICATION:** After installing the drip edge, set and nail Elk Starter into place the full length of the eave edge. Overhang the starter roll 1/4" (0.63 cm) – 1/2" (1.3 cm) to obtain a straight drip edge. Make sure WindGuard sealant is facing up and nearest the lowest edge of the eave.

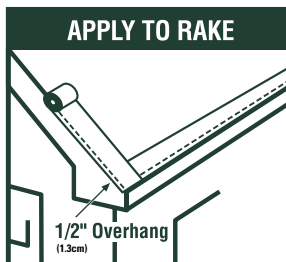

**RAKE APPLICATION:** After installing the drip edge, set and nail Elk Starter Roll into place the full length of the rake, starting at the lowest edge of the rake. Overhang the rake approx. 1/2" (1.3 cm) to obtain a straight edge reveal for rake edge shingle application. Make sure WindGuard sealant is facing up and nearest the outermost edge of the rake.



**SHINGLE APPLICATION:** After shingle starter roll is installed, apply field shingles in accordance with manufacturer's instructions.