



NOTE:

1. SEE EVERGUARD® SYSTEM GUIDELINES IN SPEC MANUAL TO DETERMINE PERIMETER AND PENETRATION FASTENER SPACING FOR VARIOUS DECK TYPES AND WIND UPLIFT REQUIREMENTS.
2. DEFAULTS TO PERIMETER FASTENING RATE.
3. DEFAULTS TO CORNER FASTENING RATE.



EverGuard
SINGLE-PLY ROOFING SYSTEMS
FIELD OF ROOF
SERIES

DRAWING #
MR-02

PURLIN FASTENING ZONES

THIS DETAIL APPLIES TO:
**Plate Welded
Systems**

1 Campus Drive
Parsippany, NJ 07054
www.gaf.com

SCALE
N.T.S.

RETROFIT

REVISION DATE
4-8-16