


NOTE: PRIME ENTIRE CORNER PRIOR TO STRIPPING IN WITH EVERGUARD® STRIP-IN TAPE (NOT SHOWN)

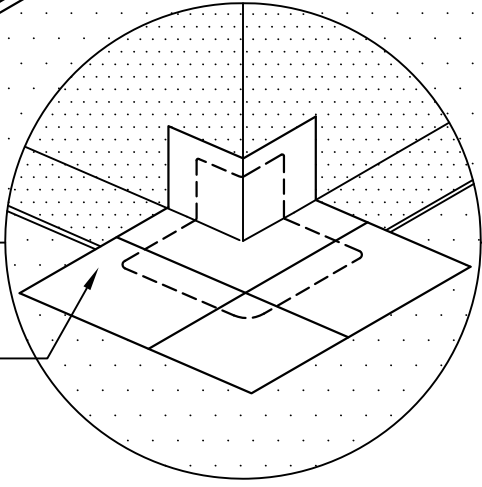

COVER EVERGUARD® UNIVERSAL CORNER WITH EVERGUARD® STRIP-IN TAPE. PRIME AREA UNDERNEATH STRIP-IN TAPE PRIOR TO INSTALLING.

NOTE:

1. APPLY FLEXSEAL™ CAULK GRADE SEALANT TO ALL EVERGUARD® STRIP-IN TAPE EDGES AND ALL CUT REINFORCED TPO EDGE.
2. MEMBRANE MUST BE PRIMED AND DRY PRIOR TO APPLYING EVERGUARD® DOUBLE SIDED TAPE.

GAF
www.gaf.com
1 Campus Drive,
Parlisppany, NJ 07054

EverGuard
SINGLE-PLY ROOFING SYSTEMS
PARAPET WALL &
CURB SERIES

DRAWING #
739
SCALE
N.T.S.

**OUTSIDE CORNER REINFORCEMENT -
UNIVERSAL CORNER DETAIL**

THIS DETAIL APPLIES TO:
**RapidSeam™
Systems**
REVISION DATE
7-14-16