


**RAPID SEAM™ MAX 10 YR GUARANTEE**

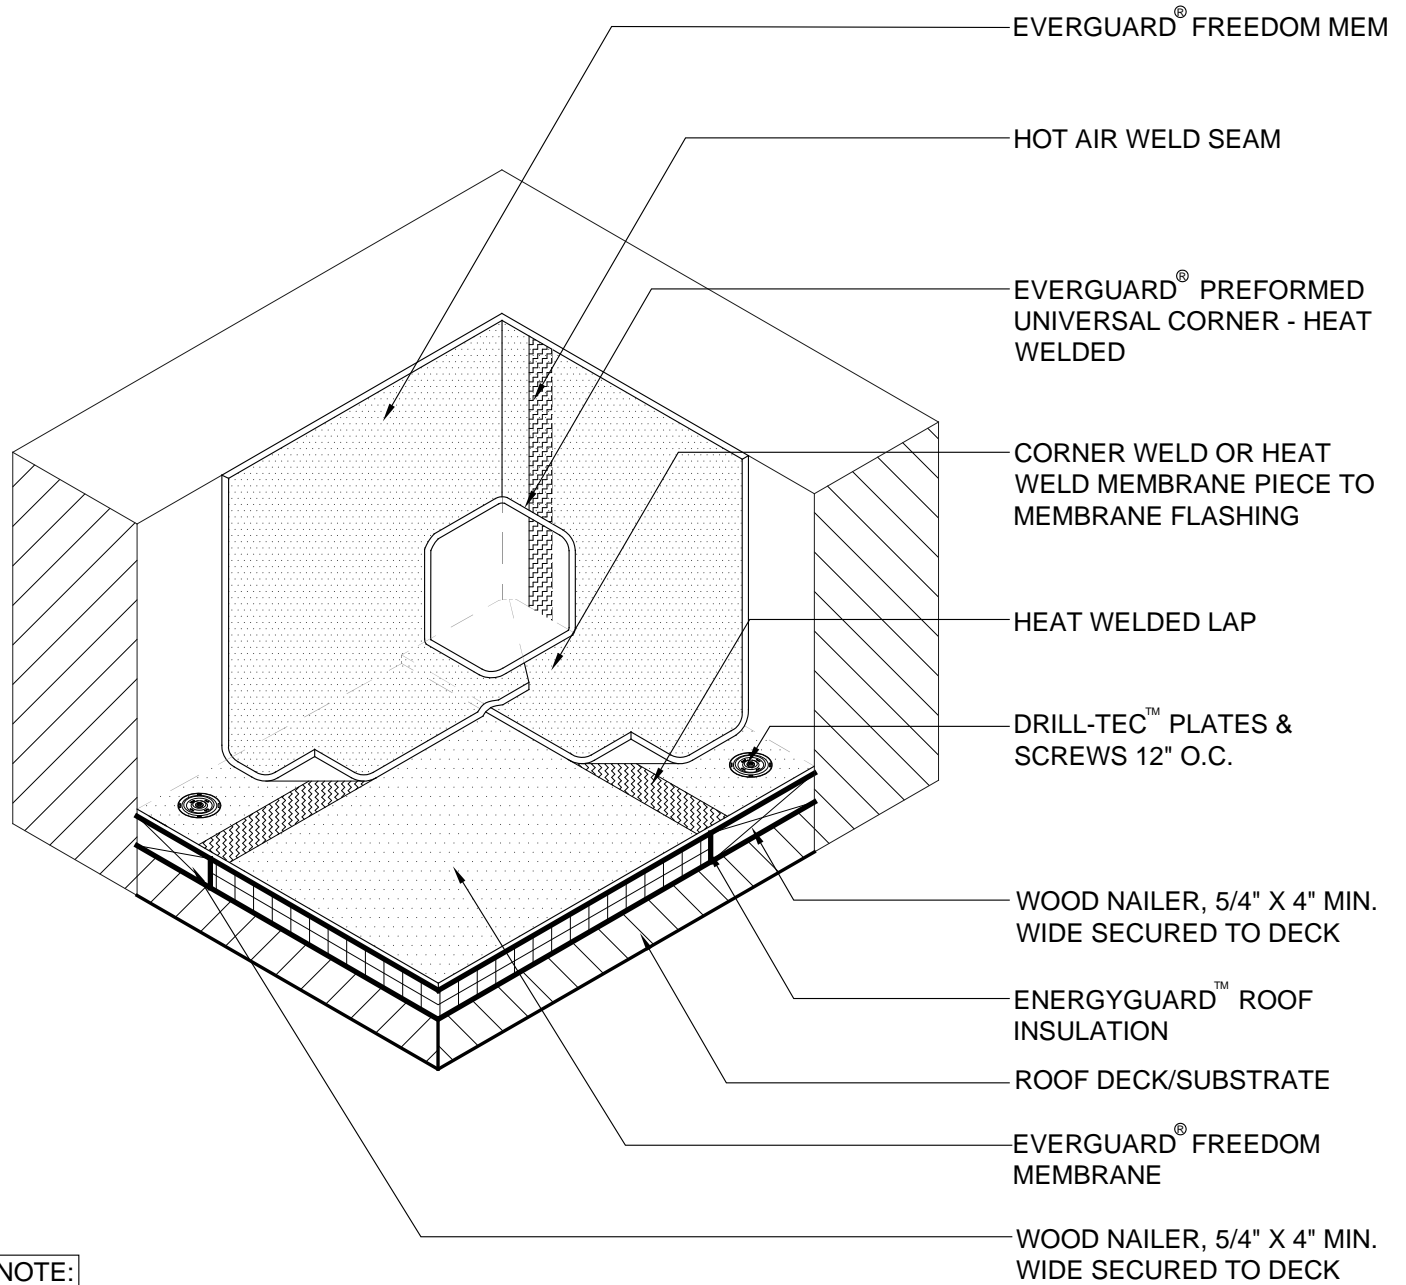

**NOTE:**

1. TO MAKE A SEAM ON RAPID SEAM™ WITHOUT RAPID SEAM™ PRESENT, YOU MUST USE GAF CLEANER AS WELL AS EVERGUARD® TPO PRIMER TO PREP THE AREA.
2. INSIDE CORNERS MAY ALSO BE FIELD FABRICATED USING UNREINFORCED MEMBRANE.
3. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES ( REFER TO DETAIL FD 115 ) AND ALL RS SEAMS.



**EverGuard® Freedom™**  
Self-Adhering Roofing System

PARAPET WALL  
& CURB SERIES

**INSIDE CORNER REINFORCMENT-  
PREFORMED CORNER DETAIL**

HEATWELD & RAPIDSEAM

DRAWING #  
**327A**

SCALE  
N.T.S.

SYSTEM  
**FD**

ISSUE/ REVISION DATE  
3-1-10