


RAPID SEAM™ MAX 10 YR GUARANTEE

STEP 1

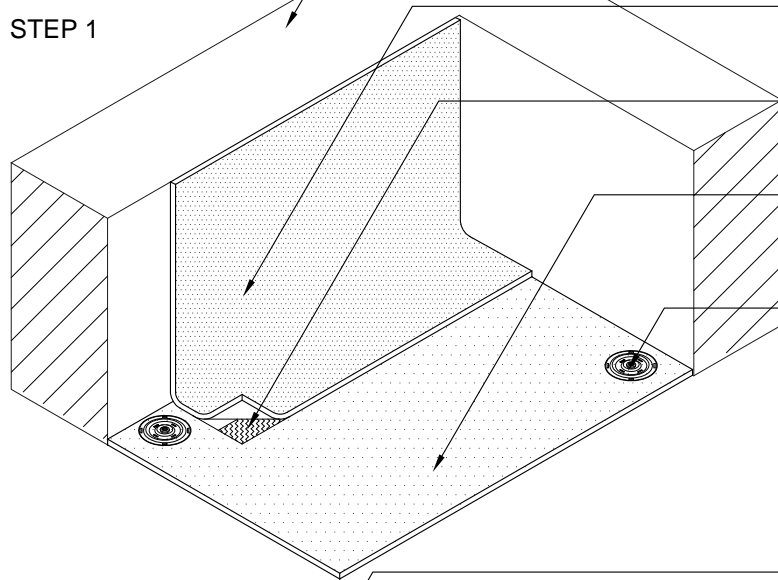

REFER TO PARAPET WALL & CURB DETAIL FOR TERMINATION


EVERGUARD® FREEDOM MEMBRANE OVER PRIMED WALL

HEAT WELDED LAP OR SEE NOT 2 IF RAPIDSEAM

EVERGUARD® FREEDOM MEMBRANE

DRILL-TEC™ PLATES & SCREWS 12" O.C.

STEP 2

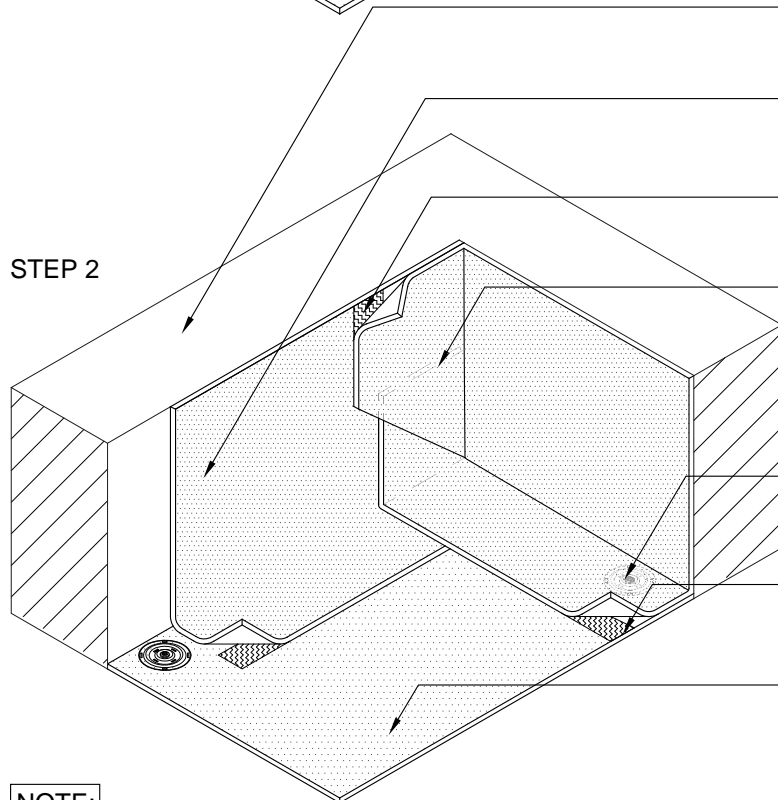

REFER TO PARAPET WALL & CURB DETAIL FOR TERMINATION

EVERGUARD® FREEDOM MEMBRANE OVER PRIMED WALL

CONTINUOUS HEAT WELDED LAP AND ALL SEGMENTS

ONE PIECE FOLD WITH PIG EAR (DO NOT CUT) ALL SEGMENTS MUST BE WELDED TO THE VERTICAL FLASHINGS

DRILL-TEC™ PLATES & SCREWS 12" O.C.

HOT AIR WELD WITH HAND OR ROBOT OR SEE NOTE 2 IF RAPIDSEAM.

EVERGUARD® FREEDOM MEMBRANE

NOTE:

1. ALL SEGMENTS OF THE EAR MUST BE WELDED TOGETHER AND WELDED TO THE WALL
2. TO MAKE A SEAM ON RAPID SEAM™ WITHOUT RAPID SEAM™ PRESENT, YOU MUST USE GAF CLEANER AS WELL AS EVERGUARD® TPO PRIMER TO PREP THE AREA.
3. CHECK SYSTEM SPEC FOR GUIDELINES ON ADHERING FLASHINGS.
4. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL RAPID SEAM EDGES (REFER TO DETAIL FD 115).



PARAPET WALL & CURB SERIES

**INSIDE CORNER FABRICATION -
2 STEP "PIG EAR" UP DETAIL**

HEATWELD & RAPIDSEAM

DRAWING #
328A

SCALE
N.T.S.

SYSTEM
FD

ISSUE/ REVISION DATE
3-1-10