


**RAPID SEAM™ MAX 10 YR GUARANTEE**

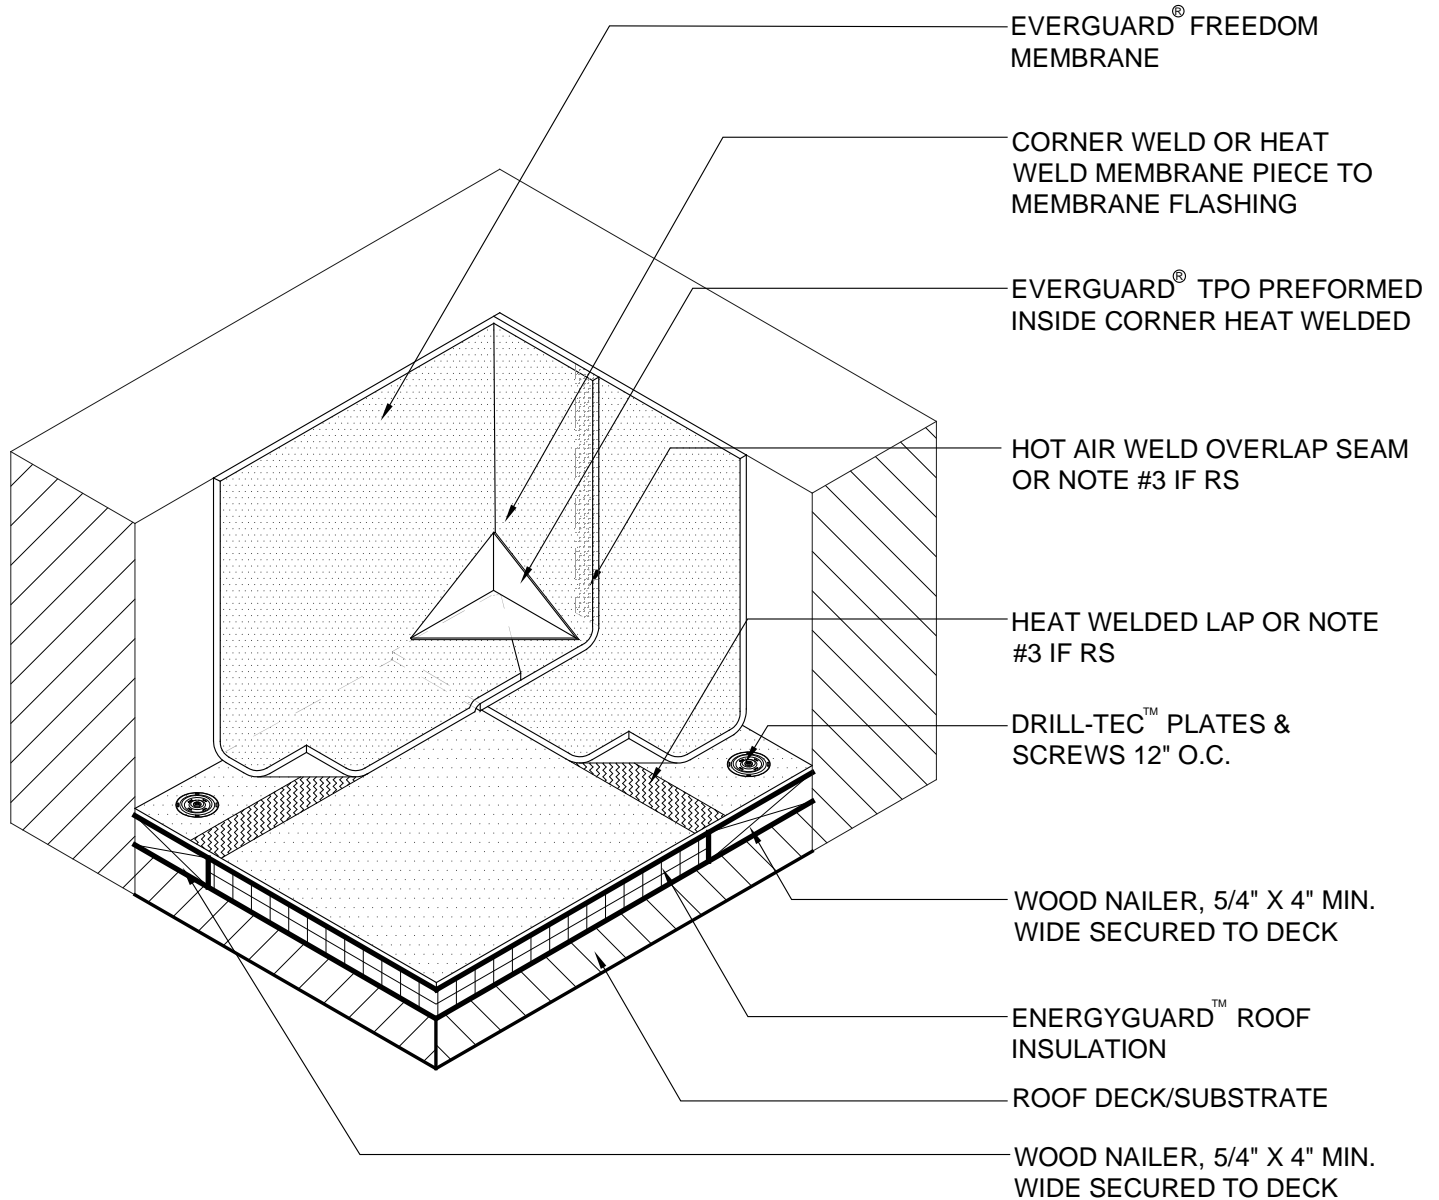

**NOTE:**

1. TO MAKE A SEAM ON RAPID SEAM™ WITHOUT RAPID SEAM™ PRESENT, YOU MUST USE GAF CLEANER AS WELL AS EVERGUARD® TPO PRIMER TO PREP THE AREA.
2. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES ( REFER TO DETAIL FD 115 ) AND ALL RS SEAMS.
3. KEEP FASTENERS BACK FROM CORNER 6" MAX. IN BOTH HORIZONTAL AND VERTICAL APPLICATIONS



PARAPET WALL & CURB SERIES

**INSIDE CORNER REINFORCMENT-  
PREFORMED CORNER DETAIL**

HEATWELD & RAPIDSEAM

DRAWING #  
**327B**

SCALE  
N.T.S.

SYSTEM  
**FD**

ISSUE/ REVISION DATE  
**3-1-10**