


RAPID SEAM™ MAX 10 YR GUARANTEE

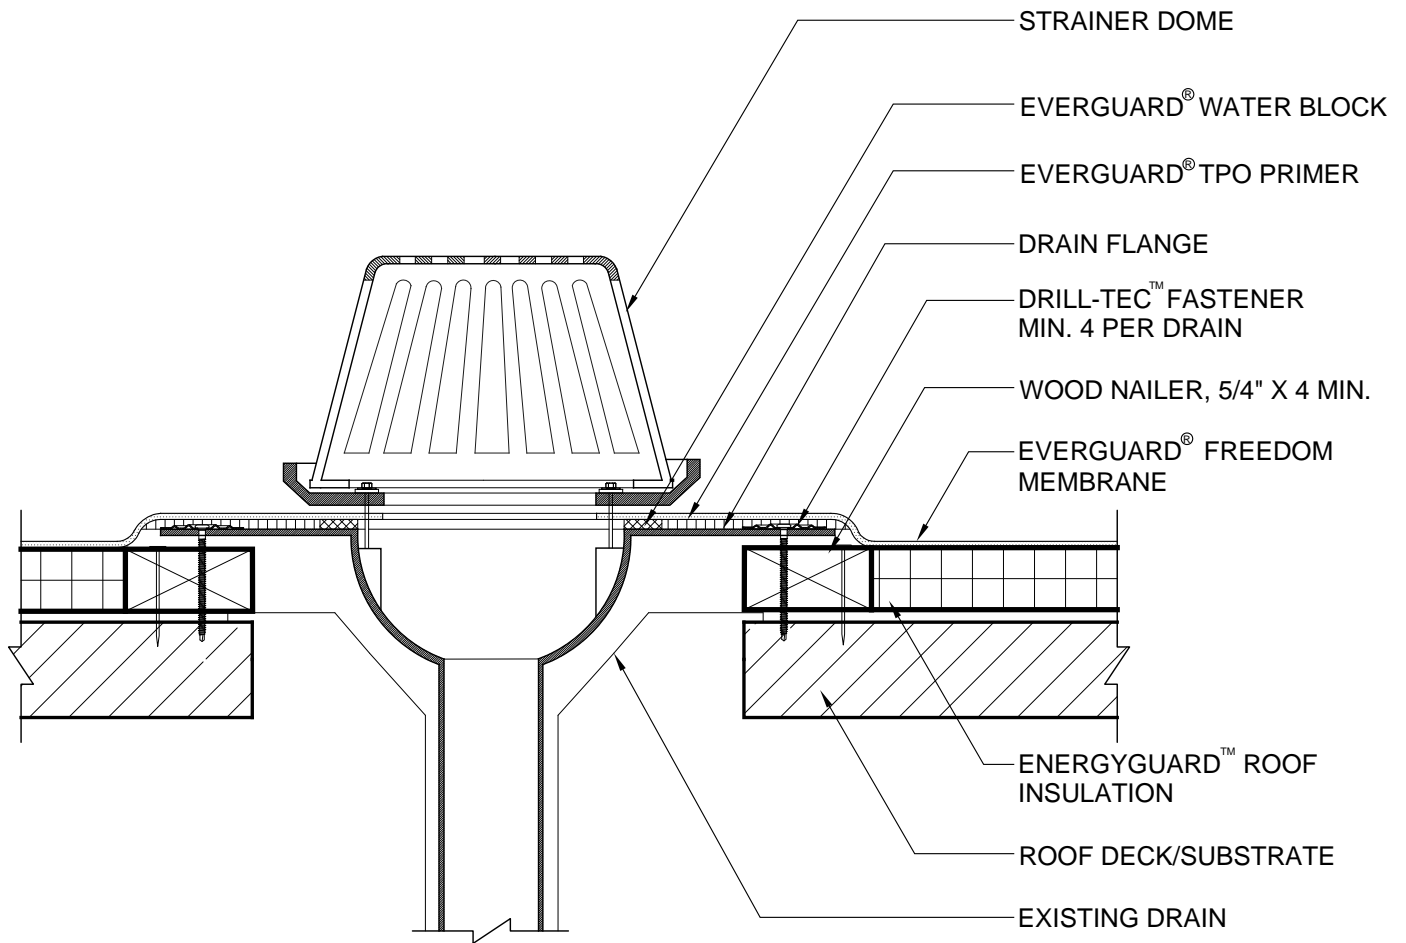

NOTE:

1. FOR RETROFIT DRAIN, INSTALL INTO EXISTING DRAIN PER MANUFACTURERS RECOMENDATION.
2. FOR INDERT DRAIN, SHOULD BE USED WHERE ANY ROOF SUMP IS GREATER THAN 1/4" IN 12"
3. TO MAKE A SEAM ON RAPID SEAM™ WITHOUT RAPID SEAM™ PRESENT, YOU MUST USE GAF CLEANER AS WELL AS GAF PRIMER TO PREP THE AREA.
4. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO DETAIL FD 115) AND ALL RAPIDSEAM™ SEAMS.



EverGuard® Freedom™
Self-Cleaning Roofing System

ROOF PENETRATION SERIES

DRAIN - RETROFIT/ INSERT

HEATWELD & RAPIDSEAM

DRAWING #

516

SCALE

N.T.S.

SYSTEM

FD

ISSUE/ REVISION DATE

3-1-10