

**SHINGLE  
INSTALLATION**

Start at either rake and lay in either direction


**First Course:**  
Start with full shingle

**Second Course:**  
Trim 6" (152mm)  
off first shingle

**Third Course:**  
Trim 11" (279mm)  
off first shingle

**Fourth Course:**  
Trim 17" (432mm)  
off first shingle

**Remaining  
Courses:**  
Repeat the  
1st - 4th course  
instructions on the  
remaining courses,  
starting the fifth course with a full shingle.

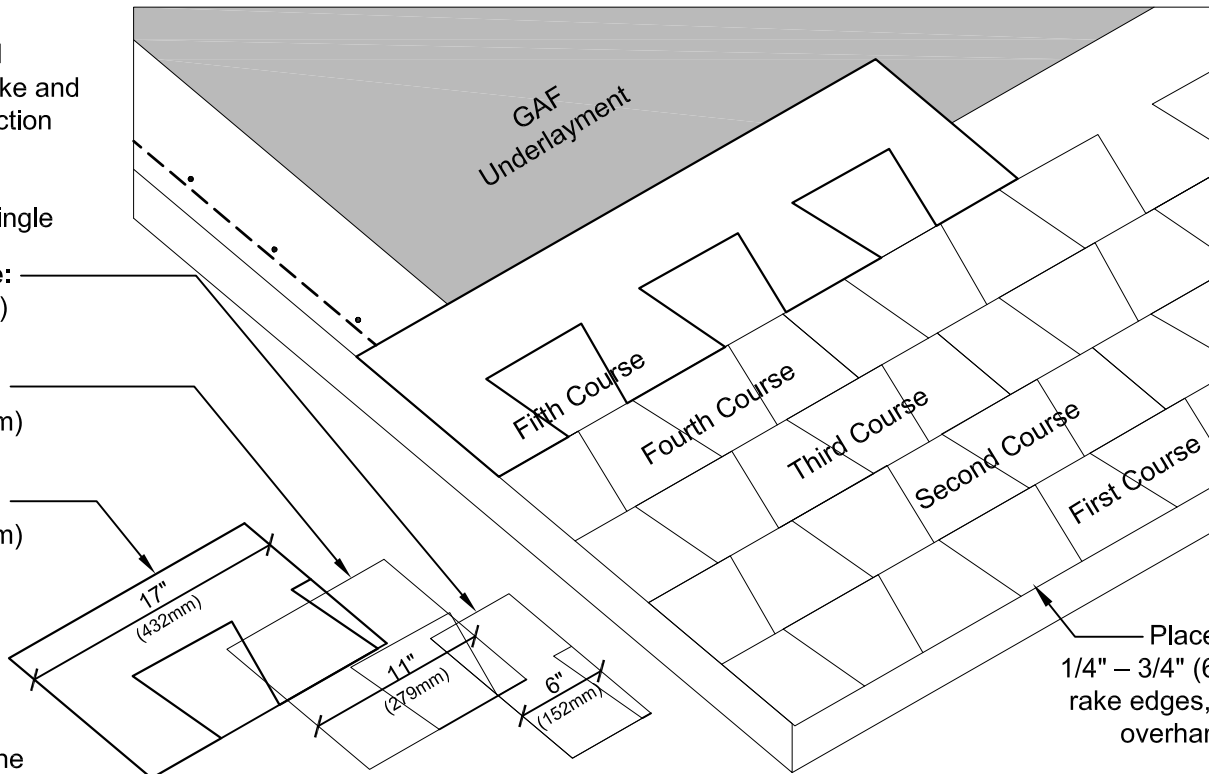

**NOTES:**

1. Continue each course with whole shingles.
2. Strike a chalk line about every 6 courses to check parallel alignment with eaves.

Place first course of shingles 1/4" - 3/4" (6-19mm) over eave and rake edges, covering starter course overhang, to provide drip edge.



1361 Alps Rd.  
Wayne, NJ 07470  
www.gaf.com

BRAND SERIES

**TIMBERLINE  
SERIES**  
Lifetime Shingles

REVISION DATE

1-01-12

SCALE

N.T.S

**SHINGLE INSTALLATION DETAIL**

DETAIL NUMBER

**04**

DETAIL REFERENCE

**SS-TS**