


NOTE:

1. THE FOLLOWING APPLIES FOR MA SYSTEMS ONLY: FOR INSULATION THICKNESSES GREATER THAN 8", CONTACT GAF CONTRACTOR SERVICES FOR ALTERNATE ATTACHMENT REQUIREMENTS. THESE METHODS MAY INCLUDE THE USE OF A HARD BOARD COVERING THE ASSEMBLY.
2. REFERENCE EVERGUARD® WALKWAY PAD SECUREMENT DETAIL.
3. WALKWAY PAD OR PAVER WITH SLIP SHEET REQUIRED AT ALL ROOF ACCESS POINTS. FOR BA SYSTEMS PAVER IN LIEU OF PAD AND BALLAST PER SPEC.
4. APPLY EVERGUARD® TPO AND PVC CUT EDGE SEALANT TO ALL CUT REINFORCED TPO AND PVC EDGES (REFER TO DETAIL MA/FA/BA 115).

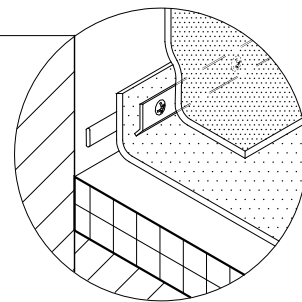

PARAPET WALL
& CURB SERIES

THRESHOLD FLASHING DETAIL

DRAWING #

312

SCALE

N.T.S.

SYSTEM

MA/FA/BA

ISSUE/ REVISION DATE

6-01-10