


**NOTE:**

1. DETAIL TO BE USED IN CONJUNCTION WITH STANDARD GUIDE SPECIFICATION CONTAINING REQUIREMENTS FOR NAILERS, INSULATION ETC.
2. APPLY EVERGUARD® TPO AND PVC CUT EDGE SEALANT TO ALL CUT REINFORCED TPO AND PVC EDGES (REFER TO DETAIL MA/FA/BA 115).

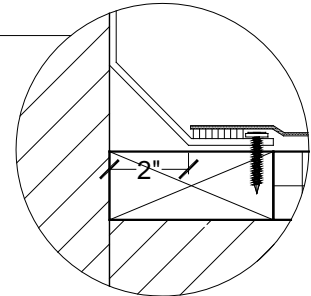

PARAPET WALL & CURB SERIES

## COATED METAL WALL FLASHING JOINT DETAIL

DRAWING #

310

SCALE

N.T.S.

SYSTEM

MA/FA/BA

ISSUE/ REVISION DATE

6-01-10