


EVERGUARD® WATER BLOCK APPLIED BEFORE SCUPPER INSTALLATION

REAR VIEW OF SCUPPER

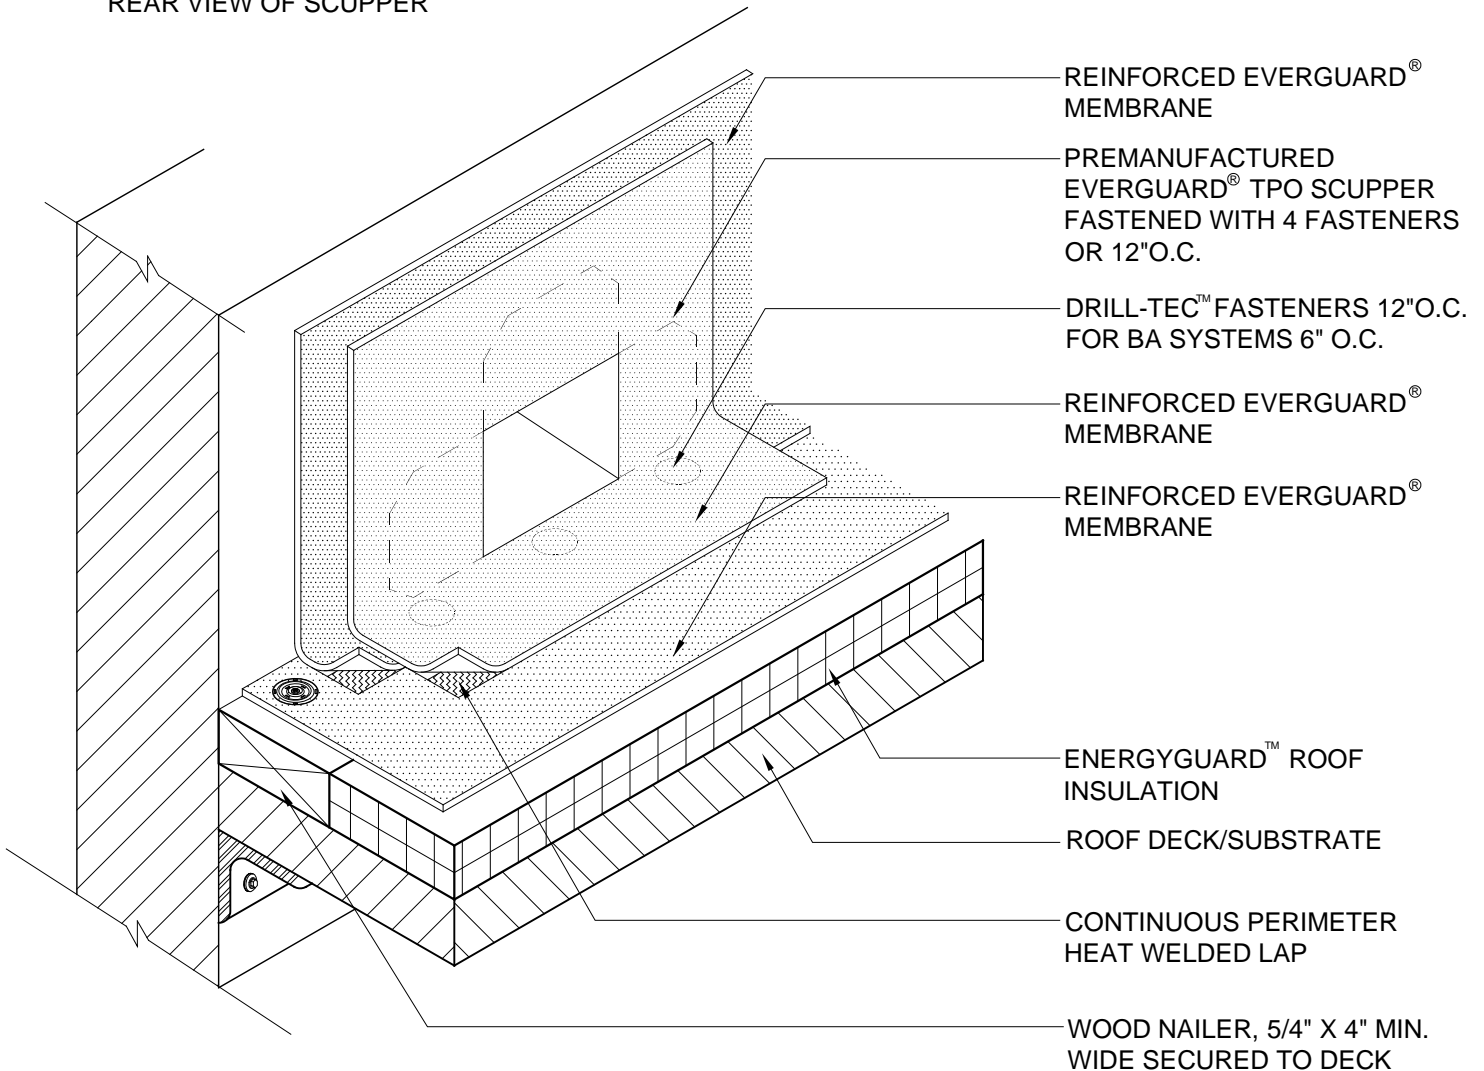

NOTE:

1. DETAIL TO BE USED IN CONJUNCTION WITH STANDARD GUIDE SPECIFICATION CONTAINING REQUIREMENTS FOR NAILERS, INSULATION ETC.
2. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO DETAIL MA/FA/BA 115).



EverGuard
SINGLE-PLY ROOFING SYSTEMS

PARAPET WALL & CURB SERIES

SCUPPER- PREMANUFACTURED

TPO ONLY

DRAWING #	SYSTEM
324	MA/FA/BA
SCALE	ISSUE/ REVISION DATE
N.T.S.	6-01-10