

TECHNICAL ADVISORY BULLETIN



Quality You Can Trust...
From North America's
Largest Roofing Manufacturer!™

To: GAF Commercial Sales, Commercial Contractors, Field Services

From: Technical Services Department

Subject: Re-Cover Over Fully Adhered EPDM With EverGuard® TPO Fleece-back Membrane In Low-Rise Foam

Date: 03/12/2014

No: TAB-C 2014-23


What is Changing?

GAF now allows... re-cover applications over fully adhered EPDM with EverGuard® TPO fleece-back membrane in low-rise foam (LRF)!

What Are GAF's Guidelines & Requirements?

- 1. Peel Test Required**
 - Insulation facer must remain bonded to the existing EPDM membrane.
- 2. Building Limitations**
 - <100 squares (929 m²) or
 - <15' (4.57 m) high without a parapet or
 - <40' (7.62 m) high with a parapet
- 3. TOPCOAT® EPDM Cleaner only.**
 - The existing EPDM membrane must be power-washed and then thoroughly cleaned with TOPCOAT® EPDM Cleaner prior to the installation of the EverGuard® TPO membrane.
- 4. Requires Supplemental Perimeter Fastening through the EPDM Membrane** prior to the installation of the EverGuard® TPO fleece-back roofing system.
- 5. Full Coverage/Spatter Pattern Application with GAF 2-Part Roofing Adhesive Only** (Formerly 3M CR-20).

What is the Supplemental Fastening Pattern Required at the Perimeter of the Existing EPDM Membrane?

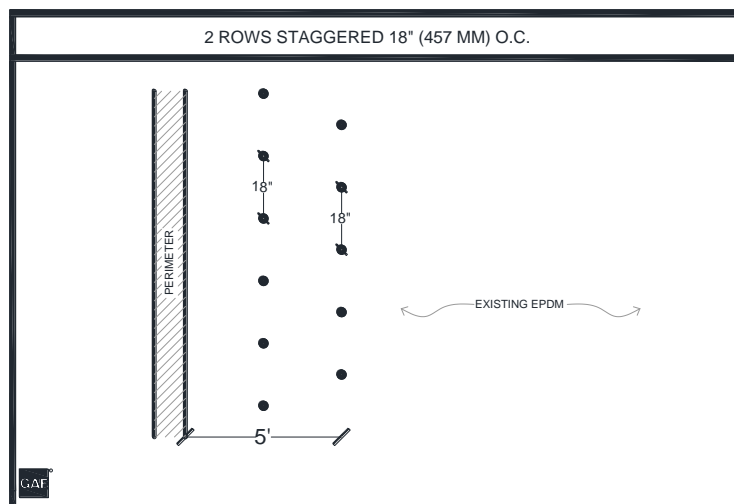

Note: Supplemental perimeter fastening is required in **both** directions in **all** corners.

Where Can I Get More Information?

GAF Technical Services can assist you... with these and other questions you may have regarding your new roof installation. GAF Technical Services can be contacted at **800-ROOF-411** (800-766-3411). Also, the GAF website is a great resource for just about any question you may have or for additional information you may require. Please visit: www.gaf.com.