
SINGLE-PLY: TPO & PVC

REFERENCE EVERGUARD® DETAIL 317D FOR VERTICAL SHEET LAYOUT

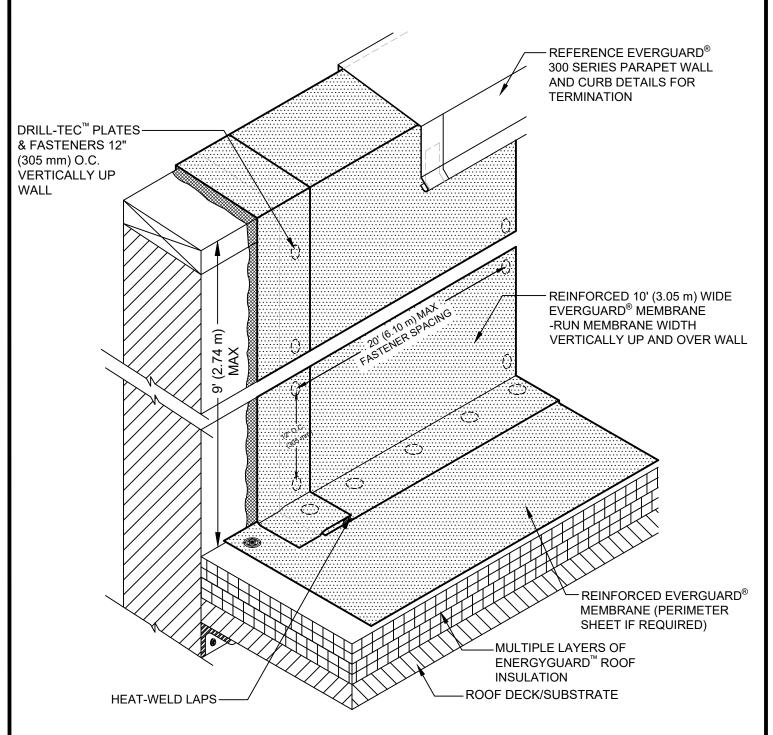

NOTE:

- 1. MUST BE FASTENED VERTICALLY ON THE WALL A MINIMUM 10' (3.05 m) FROM ALL ENDS OR CORNERS OF WALL, THEN MAX 20' (6.10 m) THEREAFTER. DRILL-TEC $^{\text{TM}}$ FASTENERS SPACED 12" (305 mm) O.C.
- 2. MAX PARAPET WALL HEIGHT NOT TO EXCEED THE WIDTH OF A 10' (3.05~m) SHEET. PARAPET WALL SHOULD BE NO TALLER THAN 9' (2.74~m) TO USE A FULL 10' (3.05~m) SHEET OF MEMBRANE AS FLASHING.



HIGH WALL FLASHING WITH 10' (3.05 m) WIDE SHEETS

DRAWING#

THIS DETAIL APPLIES TO: ISSUE / REVISION DATE SCALE

ALL SYSTEMS 8/24/20 N.T.S.

LEGEND

EVERGUARD® BONDING ADHESIVE REQUIRED