


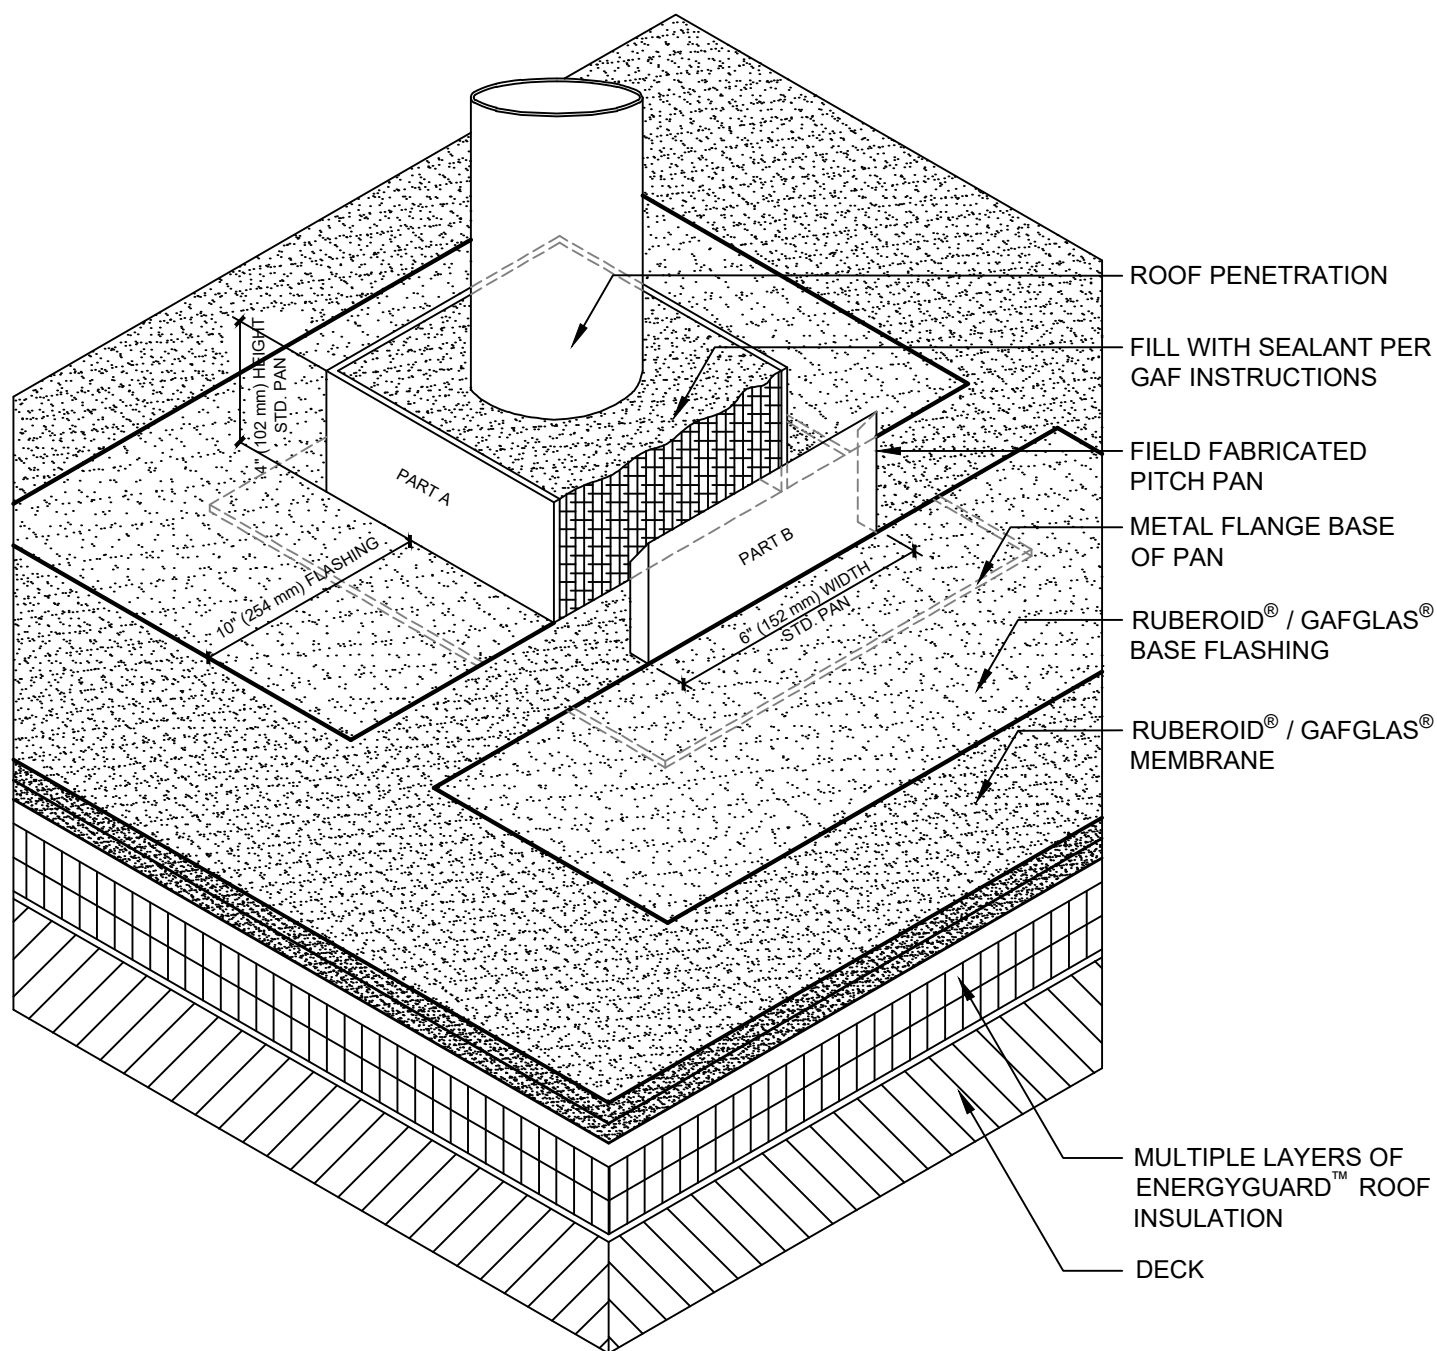

NOTE:

1. SET PRIMED FLANGE IN ROOF CEMENT ON MOP MB, COLD MB, SA MB, AND BUR.
2. SET PRIMED FLANGE IN HEAT-SOFTENED MEMBRANE ON TORCH APP PR HEAT-WELED SBS SYSTEMS.

GAF

FIELD FABRICATED PITCH PAN FLASHING DETAIL

DRAWING #
512

ISSUE / REVISION DATE

4/21/21

SCALE

N.T.S.

LEGEND

BASE / PLY SHEET(S)