


For maximum wind resistance along rakes, install Pro-Start starter<sup>®</sup> strip or cement shingles to underlayment and each other in a 4" (102 mm) width of asphalt plastic cement.

Overlap eaves edge starter strip at least 3" (76mm)

Trim 3" (76mm) from end of first shingle if using 39<sup>3</sup>/<sub>8</sub>" (1m) field shingles.

Start at either rake and lay in either direction

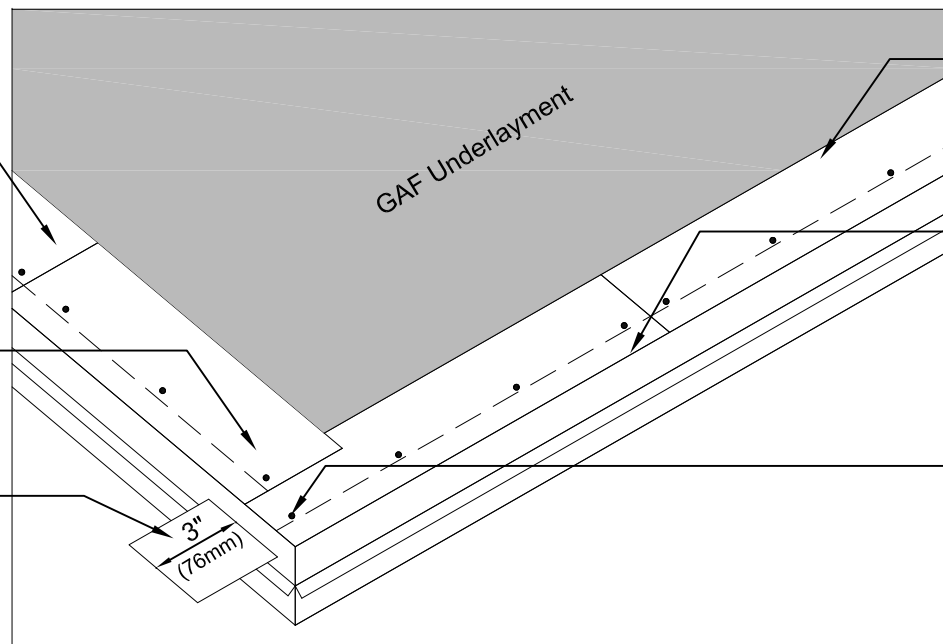

Continue with full size starter strip shingle

Place shingle 1/4" - 3/4" (6 - 19mm) over eaves and rake edges to provide drip edge.

Nail approximately 1 1/2" - 3" (38 - 76mm) above the butt edge of the shingle and approximately 1" - 2" (25 - 51mm) and 10" - 12" (254 - 305mm) in from of each side



www.gaf.com  
1361 Alps Rd.  
Wayne, NJ 07470

BRAND SERIES  
**Prostart<sup>™</sup>**  
Starter Strip  
Shingles

REVISION DATE

6-01-12

SCALE

N.T.S

## PROSTART<sup>™</sup> STARTER STRIP SHINGLE INSTALLATION DETAIL

DETAIL NUMBER

**02**

DETAIL REFERENCE

**SS-PS2**