


TARGET PATCH INSTALLATION (IF REQUIRED)

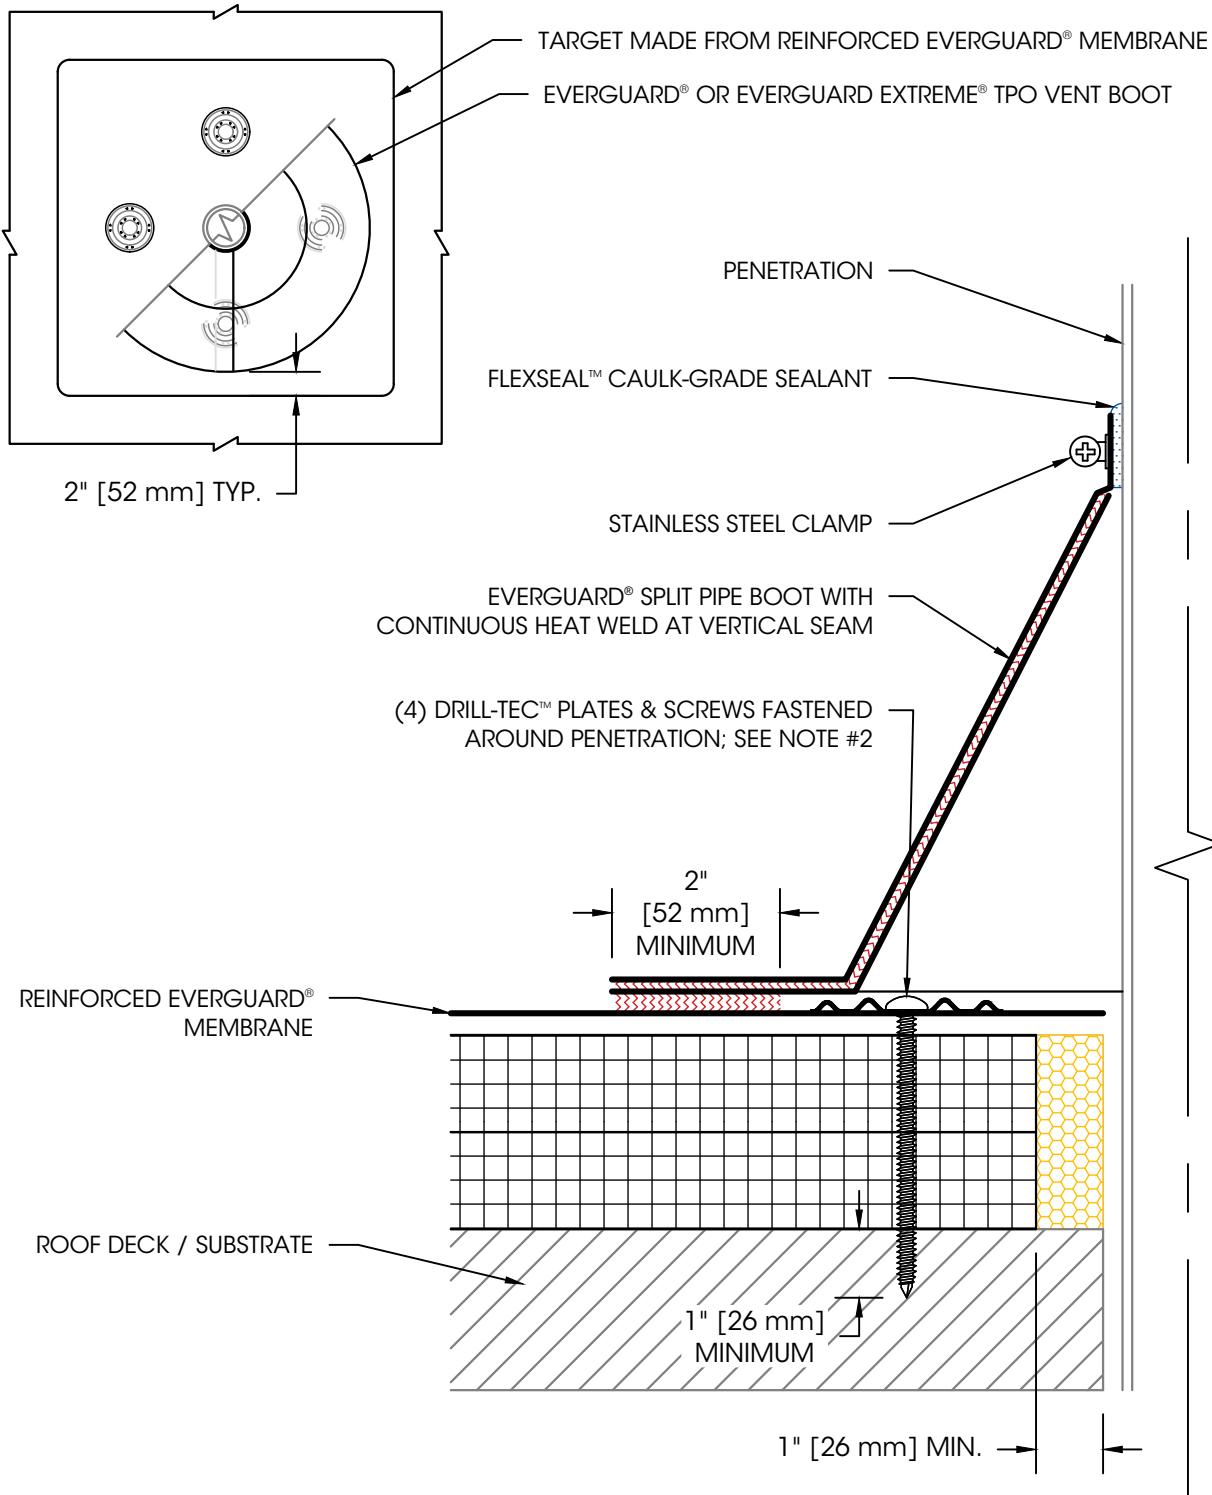

NOTES:

1. IF THE PLATES AND FASTENERS INTRUDE INTO THE BOOT FLANGE AREA, THEN A TARGET MUST BE FIRST INSTALLED OVER THE PLATES AND FASTENERS PRIOR TO BOOT INSTALLATION.
2. REFER TO THE COMPLETE INSTALLATION INSTRUCTIONS FOR PREPARATION AND TREATMENT OF MEMBRANE PRIOR TO INSTALLING THE CONICAL PIPE BOOT.
3. THIS DETAIL IS FOR USE AT LOCATIONS WITH AMBIENT INTERIOR TEMPERATURES ONLY.

GAF

We
protect
what
matters
most™

Legend:

Heat Weld



Sealant



Foam



Product:
EverGuard PVC

Installation:
Cold Storage
Systems

**Maximum
Warranty:**
—

Date:
4/23/2025

Scale:
Not To Scale

Detail No.
075419

506B

Split Conical Pipe Boot Installation