


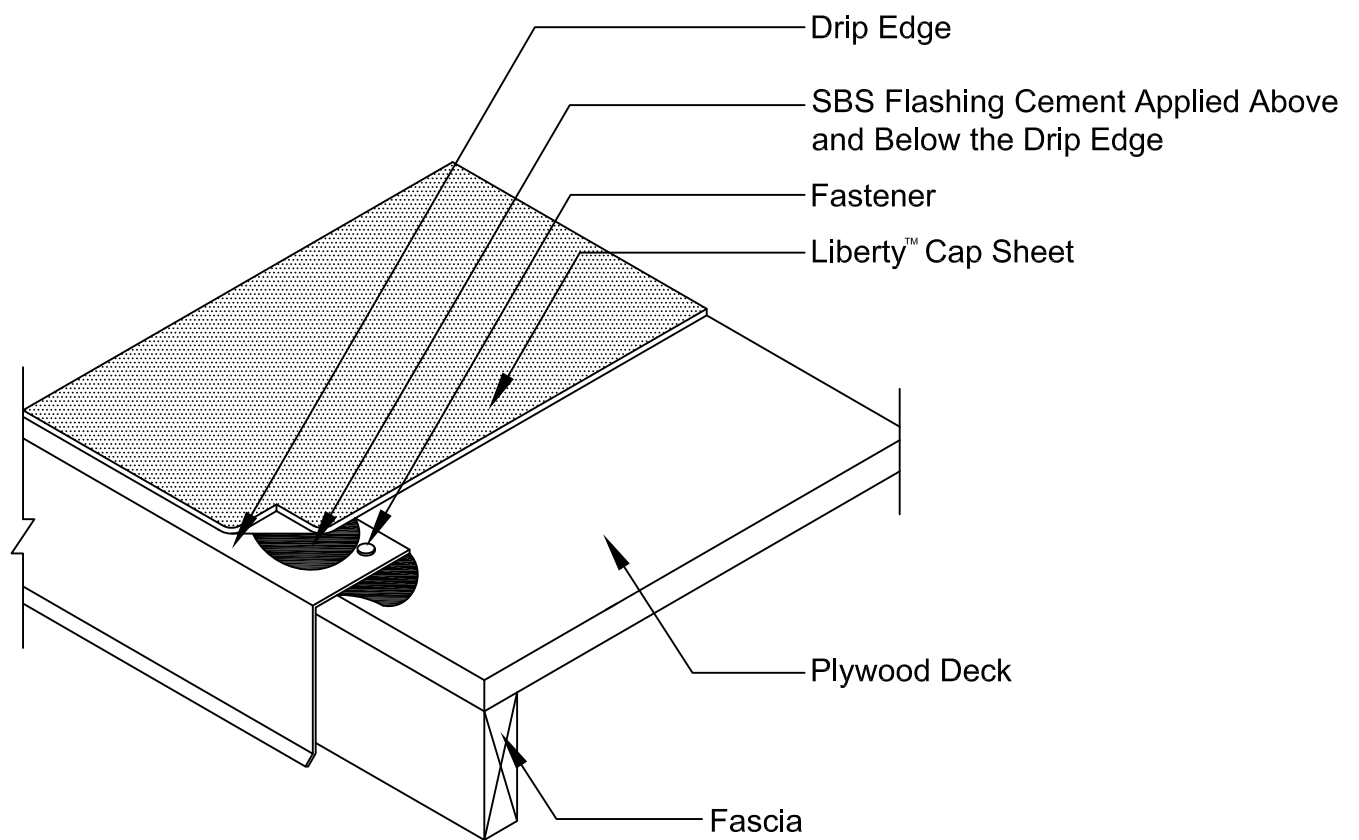

NOTE: Coat Flange with SBS Flashing Cement Before Installing LibertyTM Cap Sheet