


ALTERNATE INSTALLATION (SEE NOTE #2)

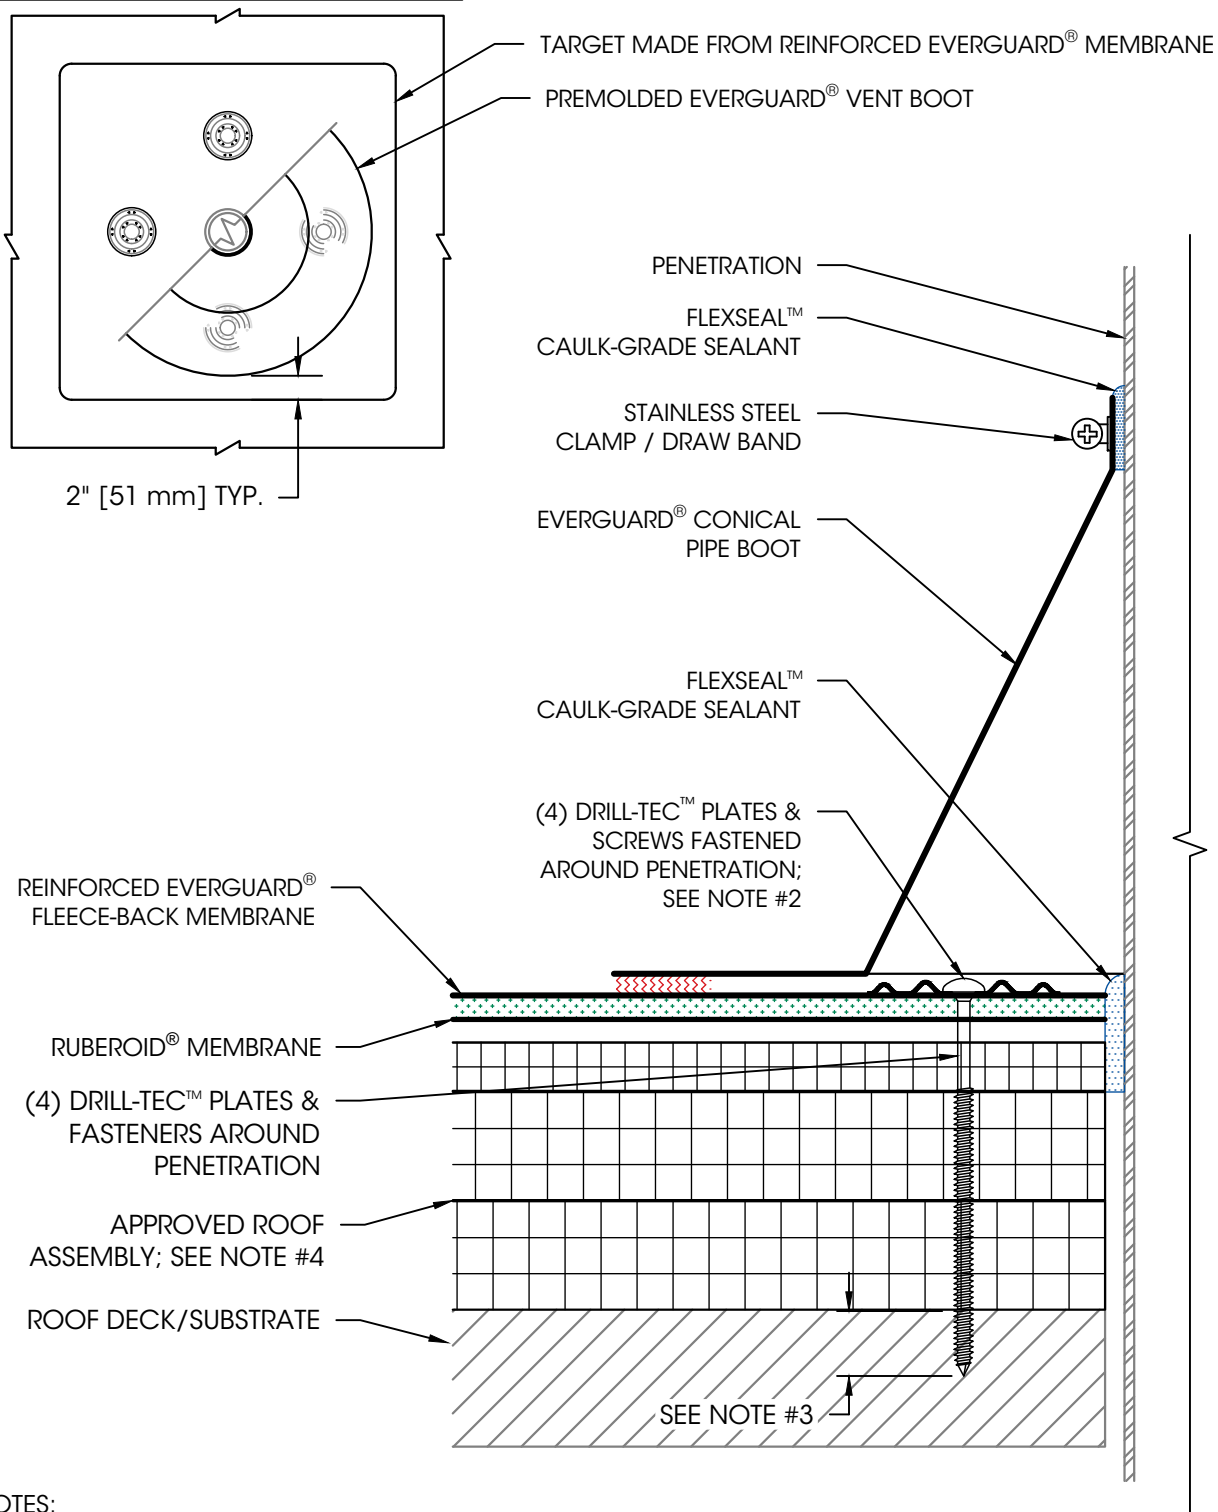

NOTES:

1. DO NOT CUT THROUGH THE SIDE OF THE PREMOLDED BOOT; IT MUST BE INSTALLED OVER THE PIPE.
2. IF THE PLATES AND FASTENERS INTRUDE INTO THE BOOT FLANGE AREA, THEN A TARGET MUST BE FIRST INSTALLED OVER THE PLATES AND FASTENERS PRIOR TO BOOT INSTALLATION.
3. REFER TO THE APPLICATION TABLES IN THE CURRENT GAF MANUAL FOR MINIMUM FASTENER PENETRATION PER DECK TYPE.
4. REQUIREMENTS AND RECOMMENDATIONS OUTLINED IN THE APPLICABLE GAF MANUAL OR GUIDE SHALL APPLY IN ADDITION TO THE DRAWING ABOVE.



We  
protect  
what  
matters  
most™

Legend:

Heat Weld



Sealant



Adhesive



Product:

EverGuard PVC  
Fleece-back

Installation

Method:

Hybrid

Maximum

Warranty:

30 Years

Date:

7/11/2025

Scale:

6" = 1'

Detail No.

07 54 19

**951**

# Conical Pipe Boot Installation