



**STEP 1:**  
REFER TO DETAIL 301 FOR  
INSTALLATION OF THE BASE  
MEMBRANE AND WALL FLASHING  
PRIOR TO REACHING THE WALL  
CORNER. NOTCH & WRAP THE  
REINFORCED EVERGUARD® WALL  
FLASHING MEMBRANE AROUND THE  
CORNER OF THE WALL A MIN. OF 4" AND  
HEAT WELD IN PLACE.

REINFORCED EVERGUARD®  
MEMBRANE

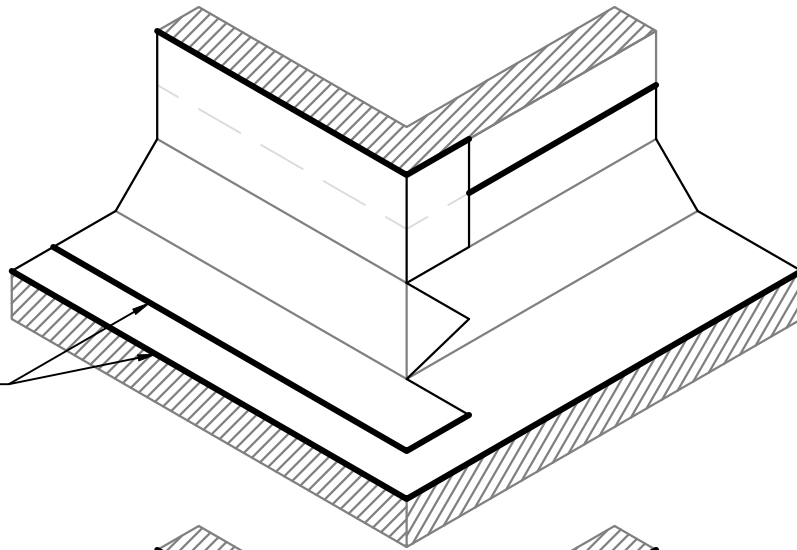


**STEP 2:**  
REPEAT STEP 1 WITH THE WALL FLASHING  
ON THE OPPOSITE CORNER OF THE  
WALL, HEAT-WELDING IN PLACE TO THE  
ADJACENT WALL FLASHING.

REINFORCED EVERGUARD®  
MEMBRANE

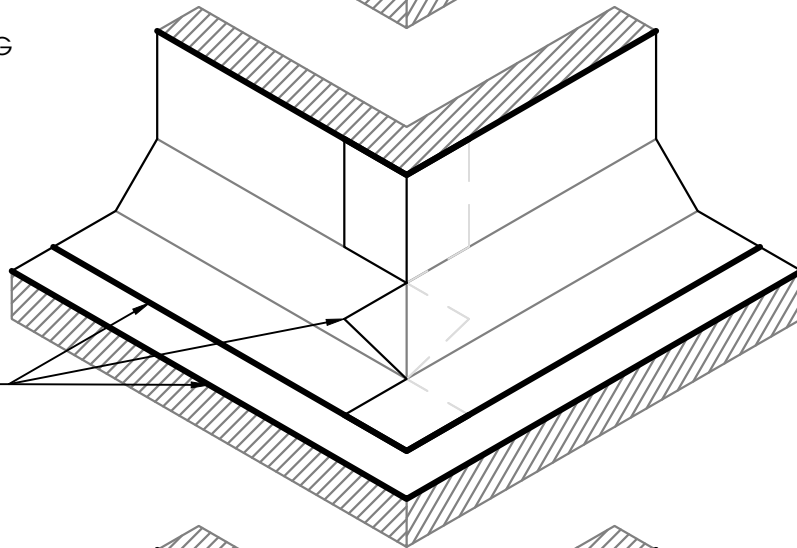

**STEP 3:**  
USING EVERGUARD® DETAILING  
MEMBRANE OR EVERGUARD® FLUTED  
CORNER PATCHES, REINFORCE THE  
JUNCTURES OF BOTH WALL FLASHING  
MEMBRANES AT THE CORNERS OF  
THE CANT. PATCHES MUST BE  
CONTINUOUSLY HEAT WELDED AT  
THE FULL PERIMETER.

UNREINFORCED MEMBRANE

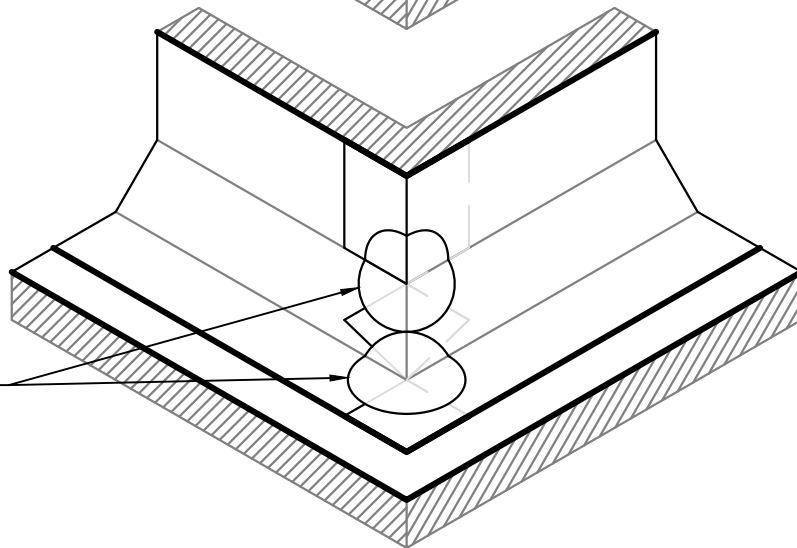

We  
protect  
what  
matters  
most™

**Product:**  
EverGuard PVC  
Fleece-back

**Installation  
Method:**  
Hybrid

**Maximum  
Warranty:**  
30 Years

**Date:**  
7/11/2025

**Scale:**  
3" = 1'

**Detail No.**  
07 54 19  
**934**

## Flashing of Outside Corner with Cant Strip