


ALTERNATE INSTALLATION (SEE NOTE #3)

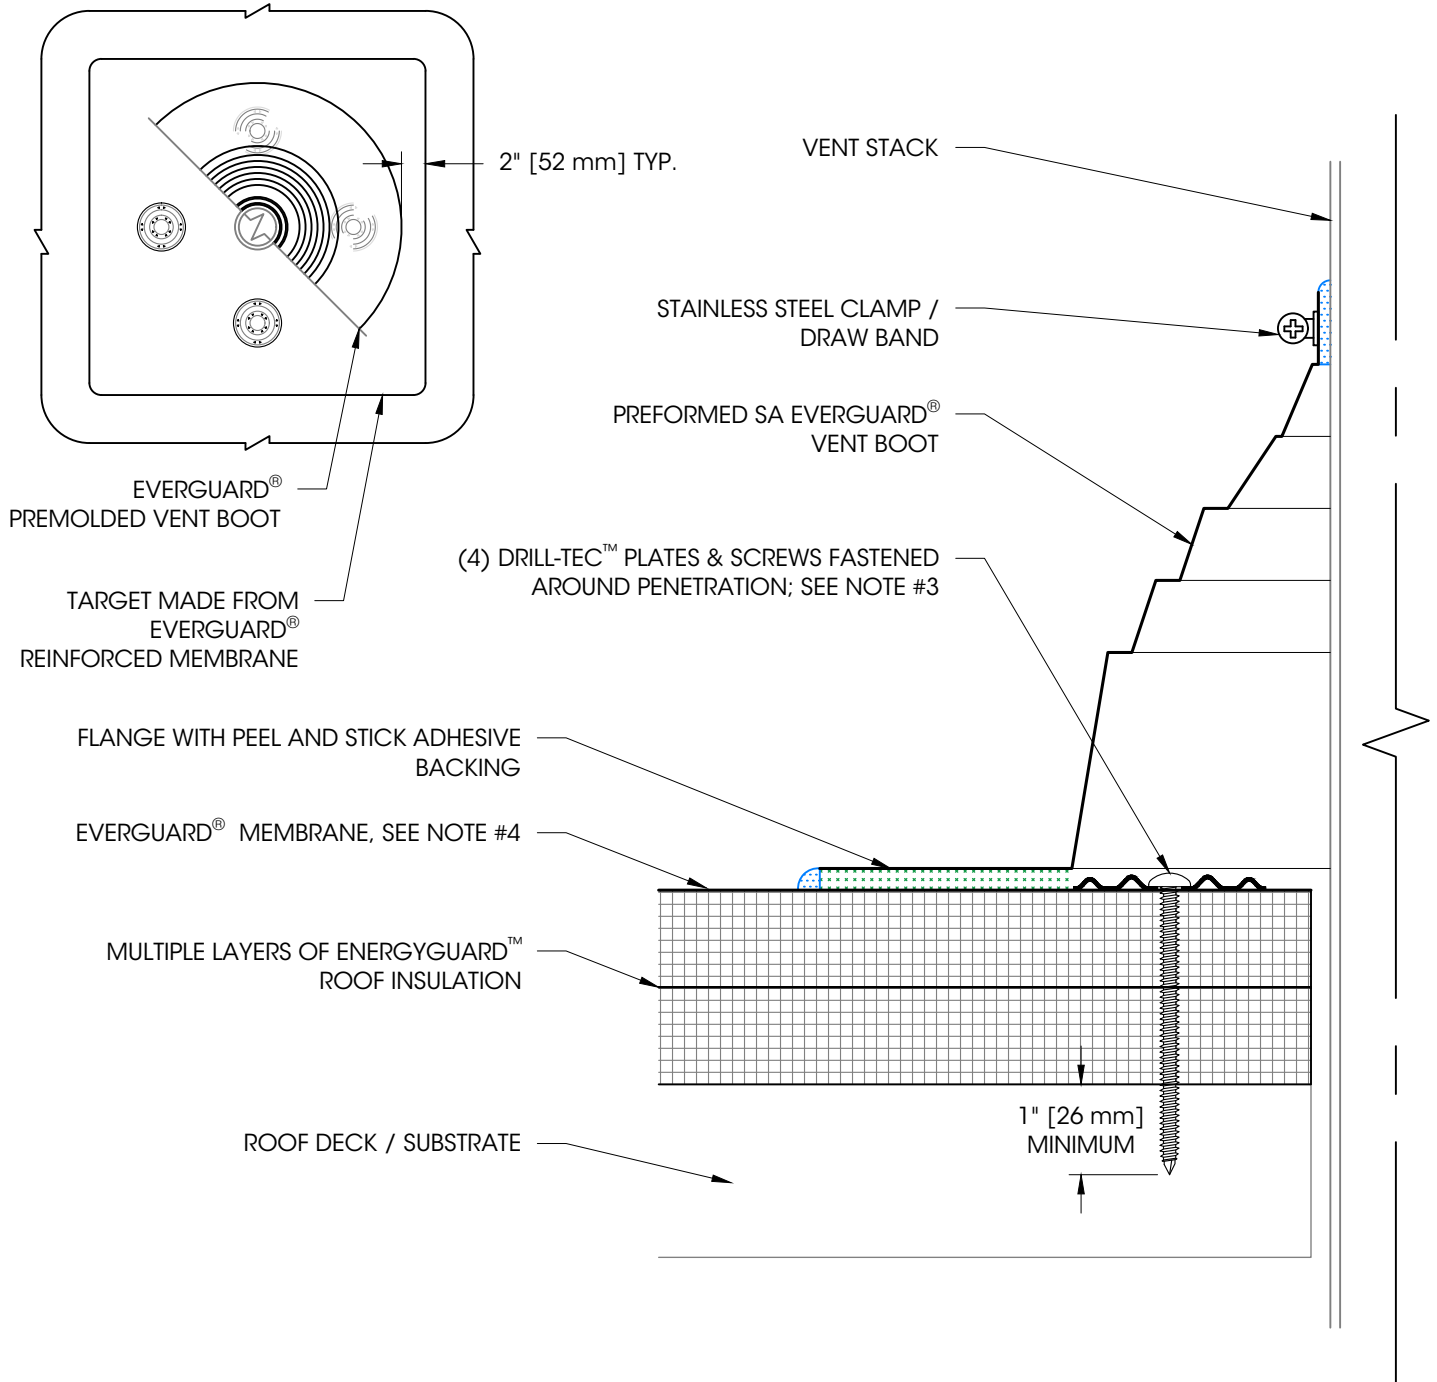

**NOTES:**

- DO NOT CUT THROUGH THE SIDE OF THE PREMOLDED BOOT; IT MUST BE INSTALLED OVER THE VENT PIPE.
- FOUR DRILL-TEC™ PLATES & SCREWS MUST BE FASTENED AROUND PENETRATION.
- IF THE PLATES AND FASTENERS INTRUDE INTO THE BOOT FLANGE AREA, THEN A TARGET MUST BE FIRST INSTALLED OVER THE PLATES AND FASTENERS PRIOR TO BOOT INSTALLATION.
- REFER TO INSTALLATION INSTRUCTIONS FOR PREPERATION AND TREATMENT OF MEMBRANE PRIOR TO INSTALLING VENT BOOT.

LEGEND		SA PREFORMED VENT BOOT			DETAIL
	ADHESIVE	ROOF AREA	ISSUE DATE	SCALE	506B
	SEALANT				
		PENETRATIONS	7/15/2024	6" = 1'	