


Extend GAF leak barrier at least 5" (127mm) up wall.

2 nails per step flashing

Place metal step flashing just upslope from exposed edge of shingle and extend 5" (127mm) over underlying shingle and 5" (127mm) up the vertical wall.

Step flashing pieces overlap each other 2" (51mm)

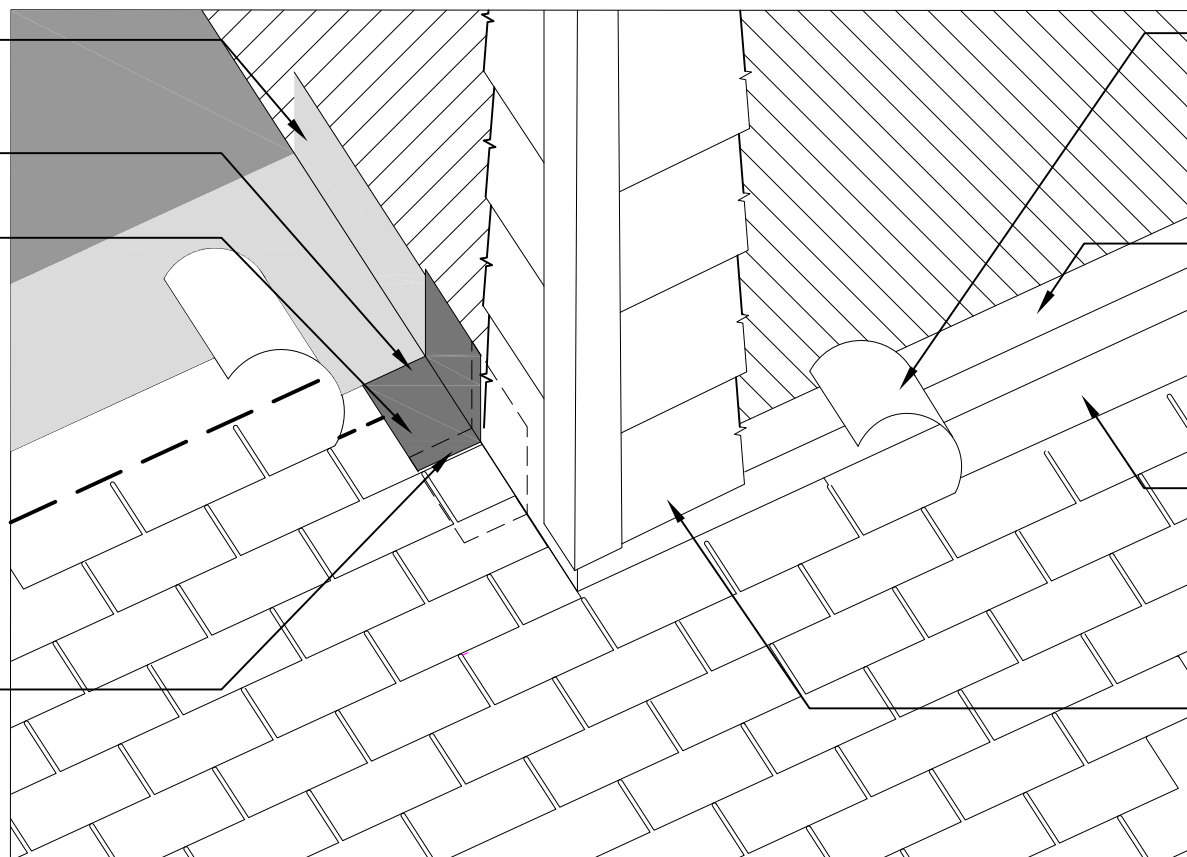

Cover metal flashing with cut shingle. Do NOT nail shingle, install with asphaltic plastic cement.

Extend GAF leak barrier at least 5" (127mm) up wall

Metal flashing (Nailed to the deck, NOT to the vertical wall) extend up wall at least 5" (127mm)

Siding/cladding must be at least 2" (51mm) above the roof surface and covering flashing at least 2" (51mm).



1 Campus Drive  
Parsippany, NJ 07054  
www.gaf.com

BRAND SERIES  
**ROYAL  
SOVEREIGN**  
Shingles

REVISION DATE  
9-01-14

SCALE  
N.T.S

## WALL FLASHING DETAIL

DETAIL NUMBER

**06**

DETAIL REFERENCE

**SS-RS**