




We  
protect  
what  
matters  
most™

Legend:  
Sealant

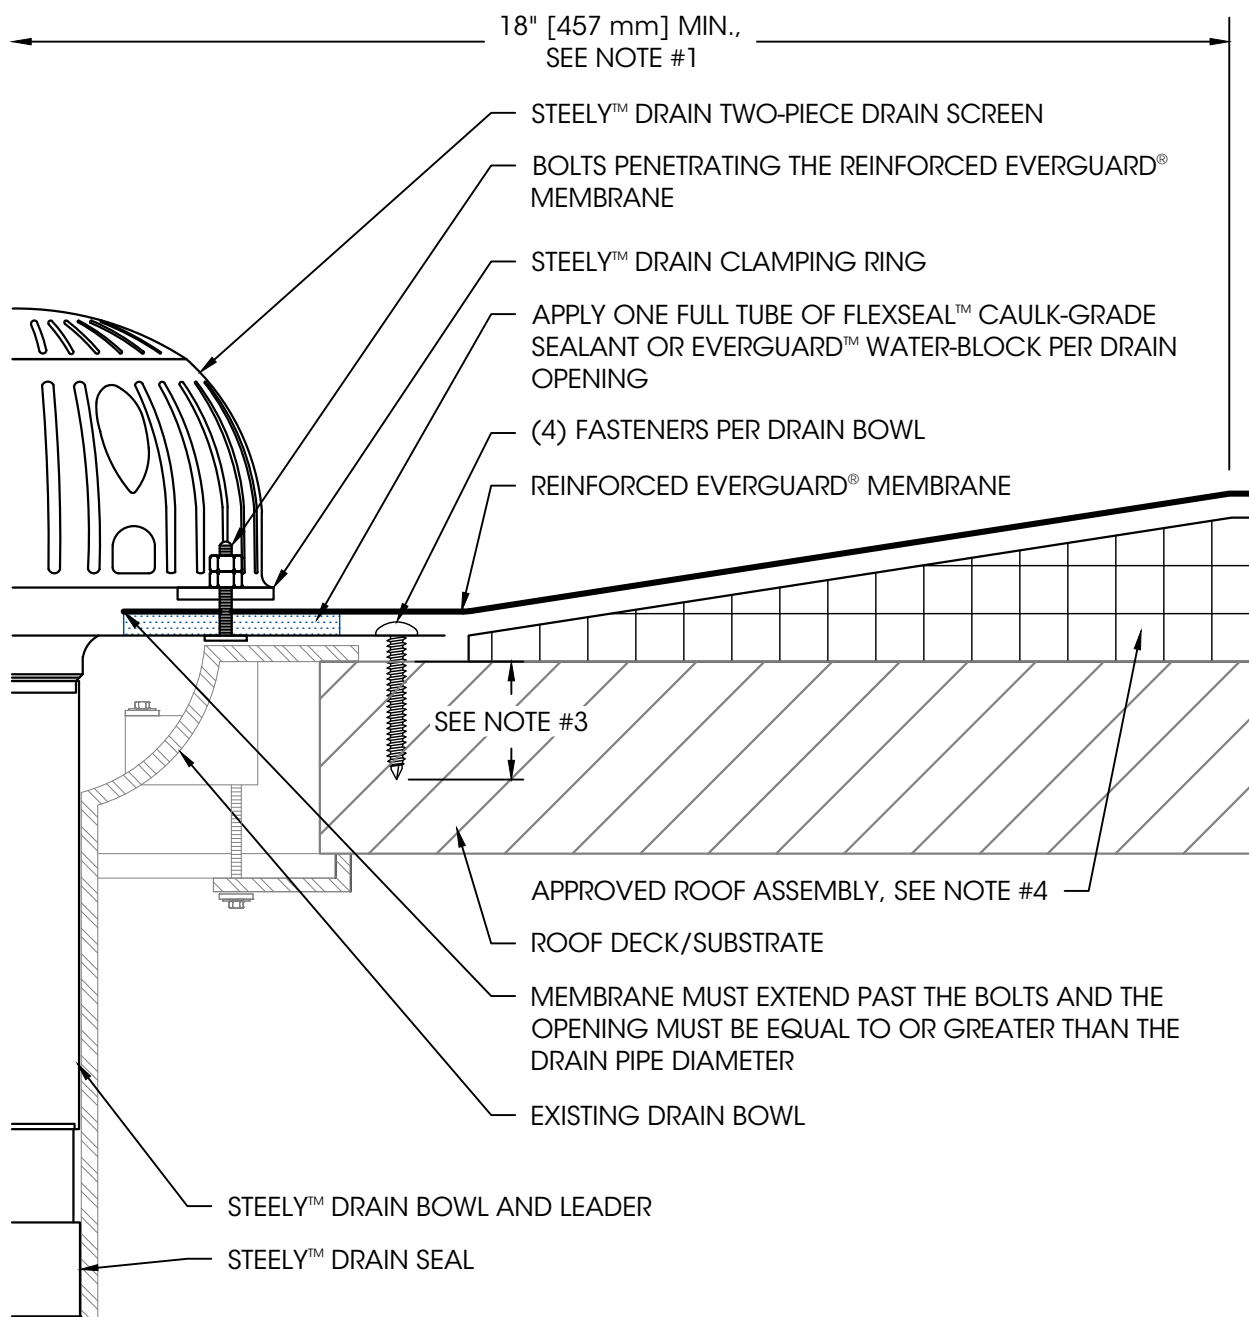

#### NOTES:

1. INSULATION MUST BE TAPERED TO CREATE A SUMP AROUND THE DRAIN WHEN THE ROOF DECK DOES NOT SATISFY THE MINIMUM SLOPE REQUIREMENTS FOR DRAINAGE.
2. IF REQUIRED BY LOCAL CODE, INSTALL THE INCLUDED FLOW CONTROL WEIR IN THE THROAT OF THE DRAIN.
3. REFER TO THE APPLICATION TABLES IN THE CURRENT GAF MANUAL FOR MINIMUM FASTENER PENETRATION PER DECK TYPE.
4. REQUIREMENTS AND RECOMMENDATIONS OUTLINED IN THE APPLICABLE GAF MANUAL OR GUIDE SHALL APPLY IN ADDITION TO THE DRAWING ABOVE.

**Product:**  
Steely Drain

**Installation:**  
All TPO Systems

**Maximum  
Warranty:**  
35 Years

**Date:**  
7/14/2025

**Scale:**  
6" = 1'

**Detail No.**  
075423  
**566**

## Steely™ Drain Installation