


ALTERNATE INSTALLATION (SEE NOTE #2)

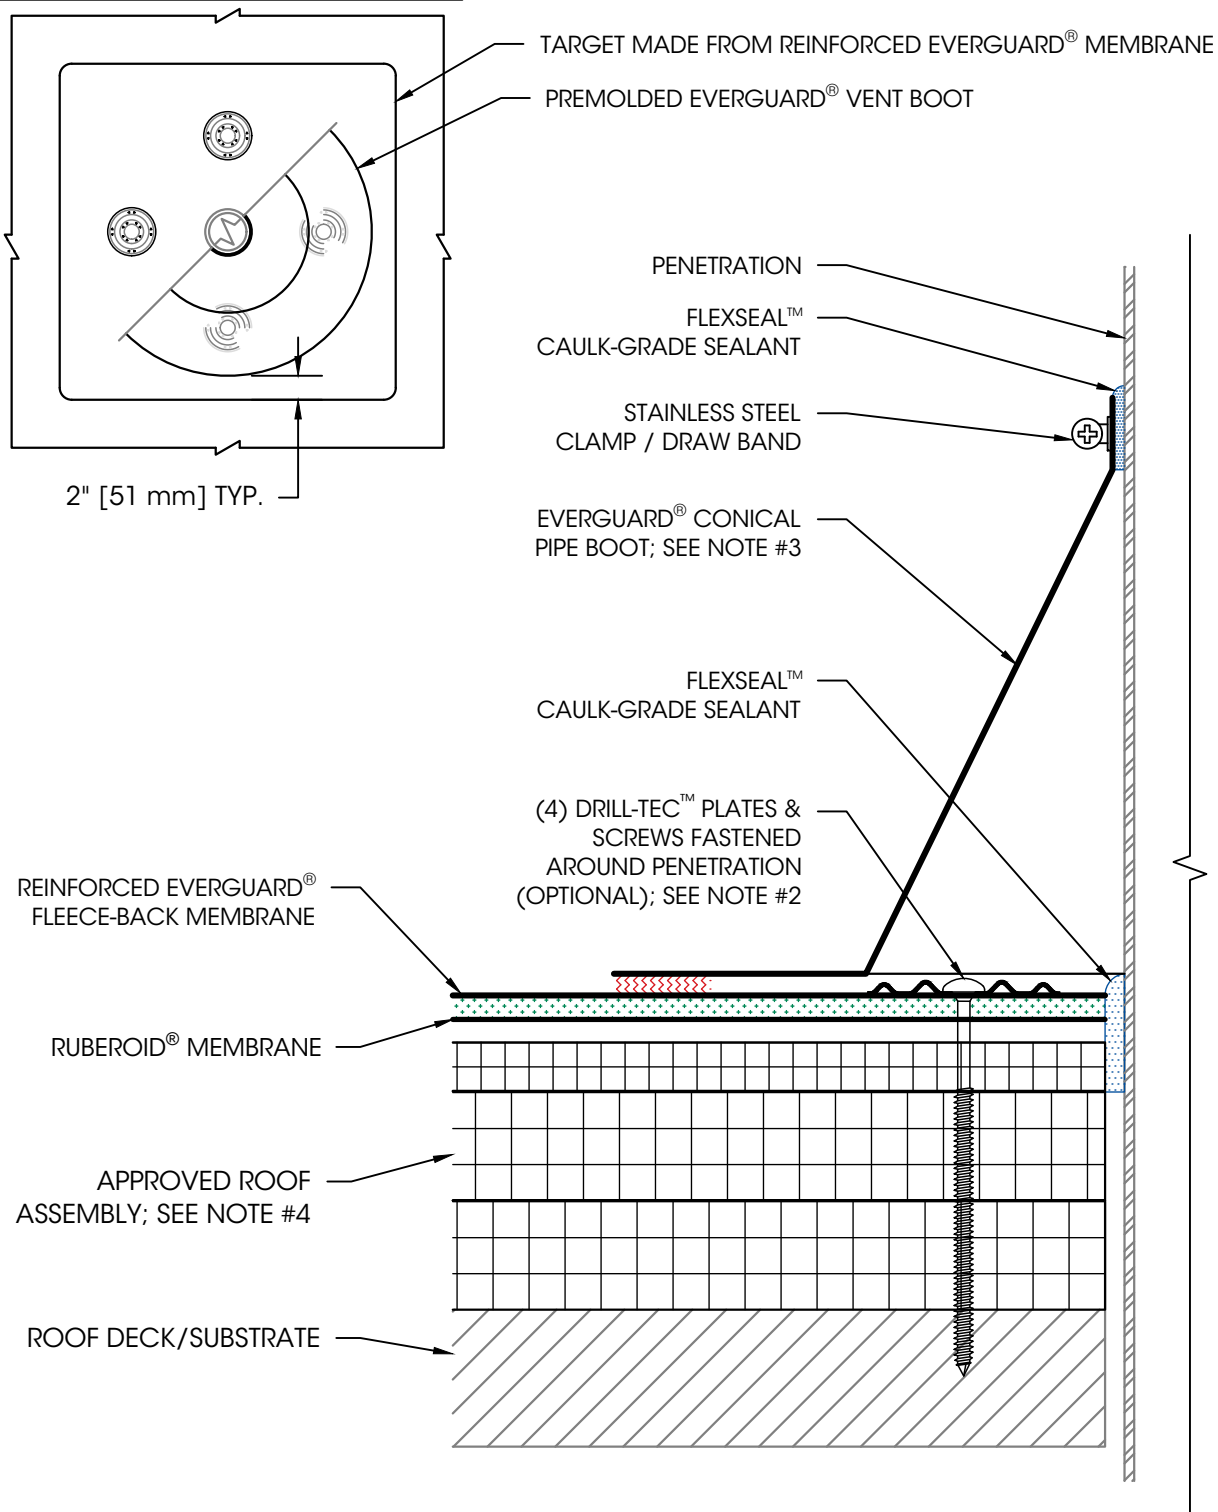

NOTES:

1. DO NOT CUT THROUGH THE SIDE OF THE PREMOLDED BOOT; IT MUST BE INSTALLED OVER THE PIPE.
2. IF THE PLATES AND FASTENERS INTRUDE INTO THE BOOT FLANGE AREA, THEN A TARGET MUST BE FIRST INSTALLED OVER THE PLATES AND FASTENERS PRIOR TO BOOT INSTALLATION.
3. 25 YEAR GUARANTEES AND ABOVE MUST USE EVERGUARD EXTREME™ ACCESSORIES.
4. REQUIREMENTS AND RECOMMENDATIONS OUTLINED IN THE APPLICABLE GAF MANUAL OR GUIDE SHALL APPLY IN ADDITION TO THE DRAWING ABOVE.



We
protect
what
matters
most™

Legend:

Heat Weld



Sealant



Adhesive



Product:

EverGuard TPO
Fleece-back

Installation

Method:

Hybrid

Maximum

Warranty:

35 Years

Date:

8/5/2025

Scale:

6" = 1'

Detail No.

07 54 23

951

Conical Pipe Boot Installation