



STEP 1:
REFER TO DETAIL 301 FOR
INSTALLATION OF THE BASE
MEMBRANE AND WALL FLASHING
PRIOR TO REACHING THE WALL
CORNER. NOTCH & WRAP THE
REINFORCED EVERGUARD® WALL
FLASHING MEMBRANE AROUND THE
CORNER OF THE WALL A MIN. OF 4" AND
HEAT WELD IN PLACE.

REINFORCED EVERGUARD®
MEMBRANE

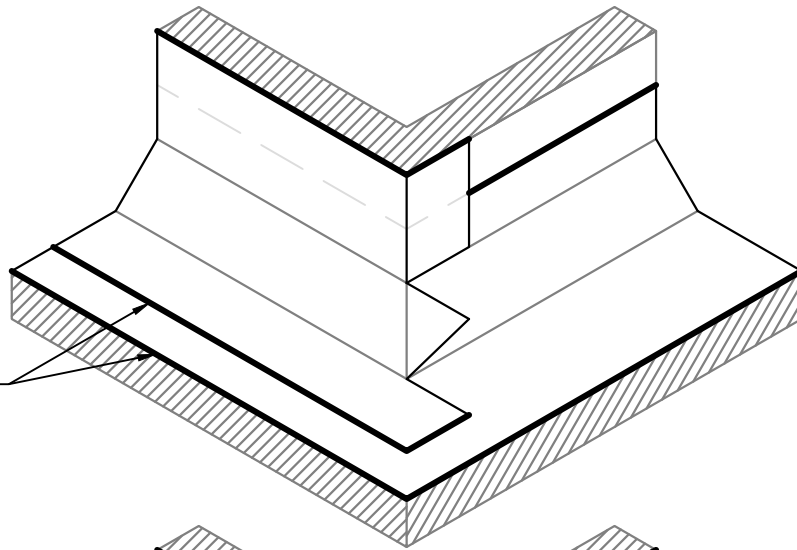


STEP 2:
REPEAT STEP 1 WITH THE WALL FLASHING
ON THE OPPOSITE CORNER OF THE
WALL, HEAT-WELDING IN PLACE TO THE
ADJACENT WALL FLASHING.

REINFORCED EVERGUARD®
MEMBRANE

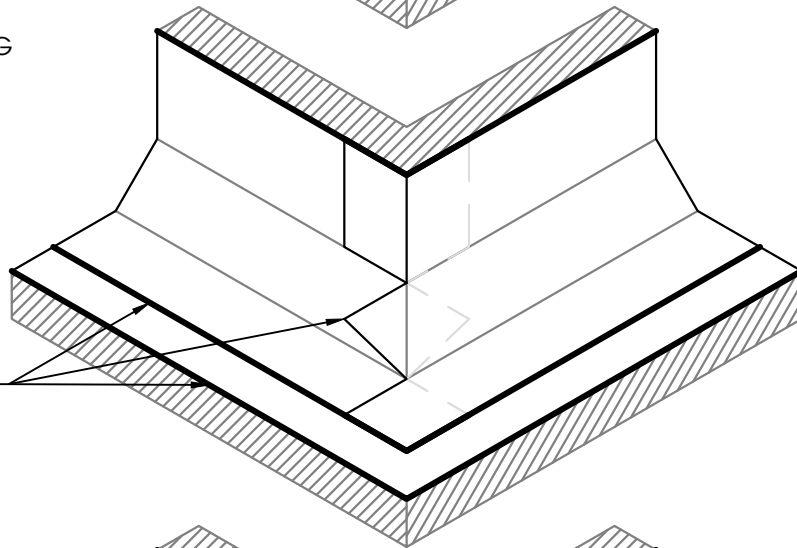

STEP 3:
USING EVERGUARD® DETAILING
MEMBRANE OR EVERGUARD® FLUTED
CORNER PATCHES, REINFORCE THE
JUNCTURES OF BOTH WALL FLASHING
MEMBRANES AT THE CORNERS OF
THE CANT. PATCHES MUST BE
CONTINUOUSLY HEAT WELDED AT
THE FULL PERIMETER.

UNREINFORCED MEMBRANE

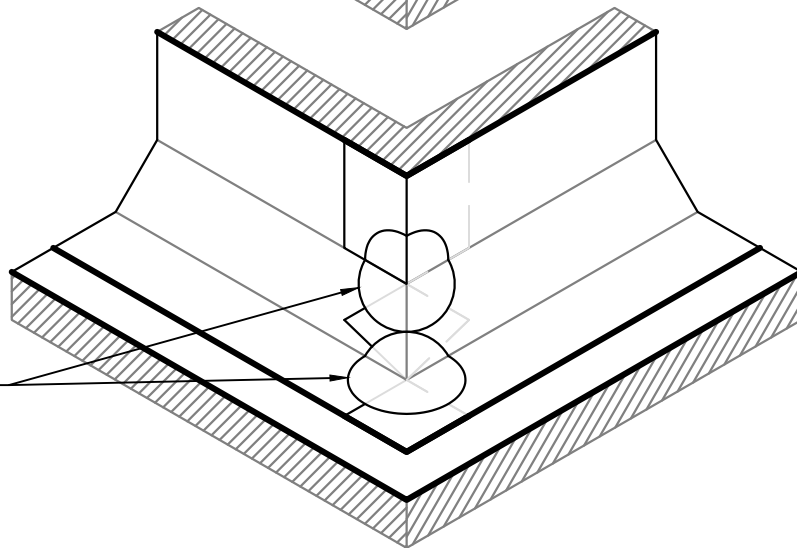

We
protect
what
matters
most™

Product:
EverGuard TPO
Fleece-back

**Installation
Method:**
Hybrid

**Maximum
Warranty:**
35 Years

Date:
7/11/2025

Scale:
3" = 1'

Detail No.
07 54 23
934

Flashing of Outside Corner with Cant Strip