




We
protect
what
matters
most™

Legend:

Sealant



Adhesive

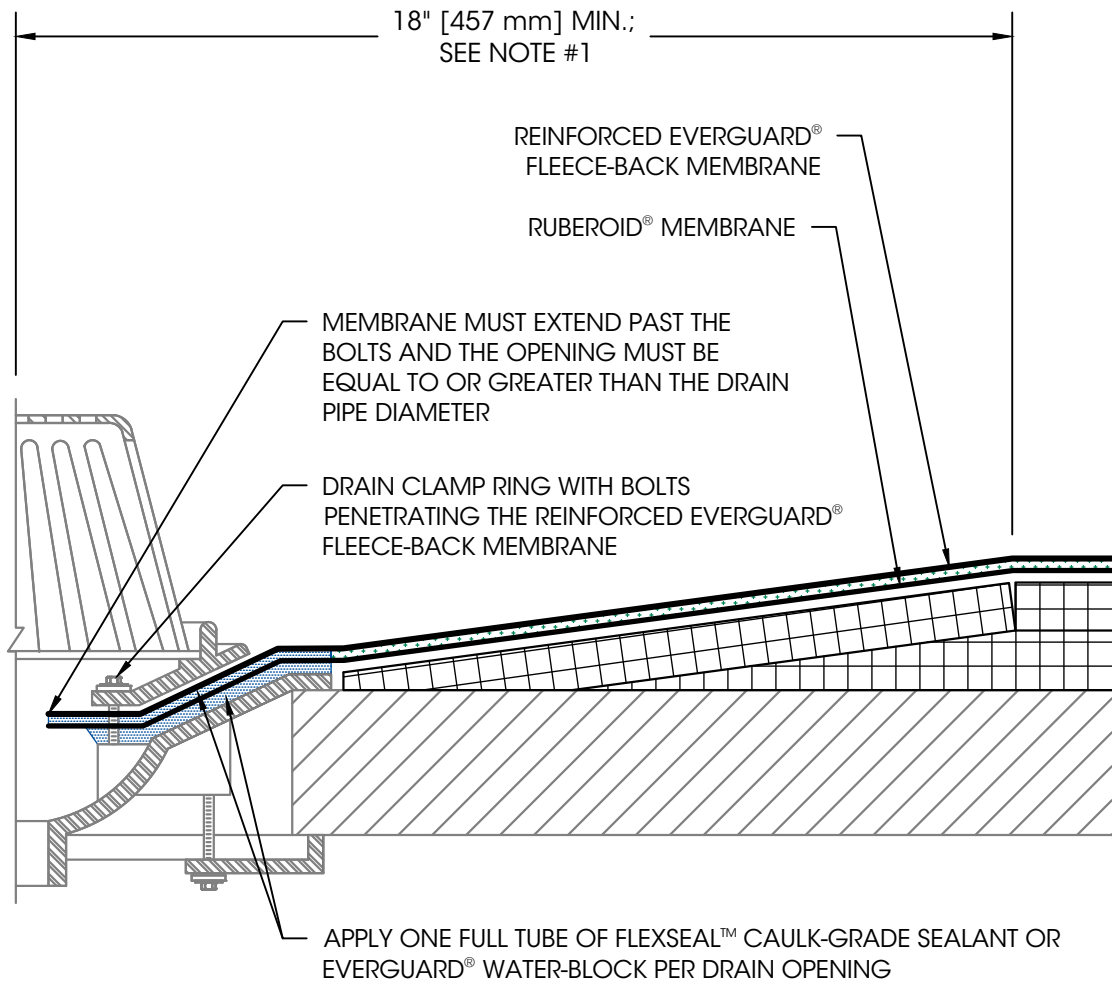

NOTES:

1. INSULATION MUST BE TAPERED TO CREATE A SUMP AROUND THE DRAIN WHEN THE ROOF DECK DOES NOT SATISFY THE MIN. SLOPE REQUIREMENTS FOR DRAINAGE.
2. FOR HEAT WELDED LAPS, USE A MIN. 1-1/2" WELD WITH MACHINE AUTOMATIC WELDERS OR A MIN. 2" WELD WITH A HAND WELDER.

Product:

EverGuard TPO
Fleece-back

Installation

Method:

Hybrid

Maximum

Warranty:

35 Years

Date:

7/11/2025

Scale:

6" = 1'

Detail No.

07 54 23

954

Standard Drain Flashing