


#### MEMBRANE PREPARATION FOR INSIDE CORNER

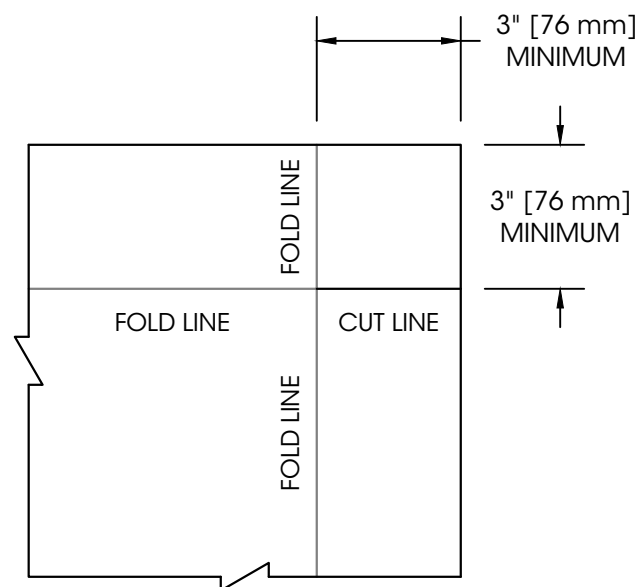

#### NOTES:

1. REFER TO GAF'S "A GUIDE TO VAPOR RETARDER DESIGN & GAF SA VAPOR RETARDER XL" AND THE GAF SA VAPOR RETARDER XL INSTALLATION INSTRUCTIONS FOR COMPLETE REQUIREMENTS AND GUIDELINES.
2. THIS DETAIL TO BE USED IN CONJUNCTION WITH THE STANDARD WALL & CURB FLASHING DETAIL FOR THE APPROVED ROOF SYSTEM.
3. MAINTAIN SEPARATION BETWEEN THE VAPOR RETARDER AND MEMBRANE/ADHESIVES TO AVOID POTENTIAL INCOMPATIBILITY ISSUES.
4. DETAIL AREAS SUCH AS T-LAPS, ROOF-TO-CURB/WALL TRANSITIONS AND PENETRATIONS REQUIRE ROLLING THE MEMBRANE INTO PLACE WITH A SILICONE OR STEEL HAND ROLLER.

## Vapor Retarder Termination at Inside Corner



**We  
protect  
what  
matters  
most™**

#### Legend:

Sealant  


**Product:**  
GAF SA Vapor  
Retarder XL

**Installation:**  
All Systems

**Maximum  
Warranty:**  
—

**Date:**  
1/17/2025

**Scale:**  
3" = 1'

**Detail No.**  
072613  
**302**