



ALTERNATE INSTALLATION

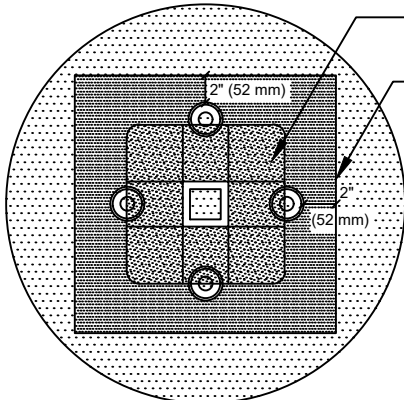

SEE NOTE #1

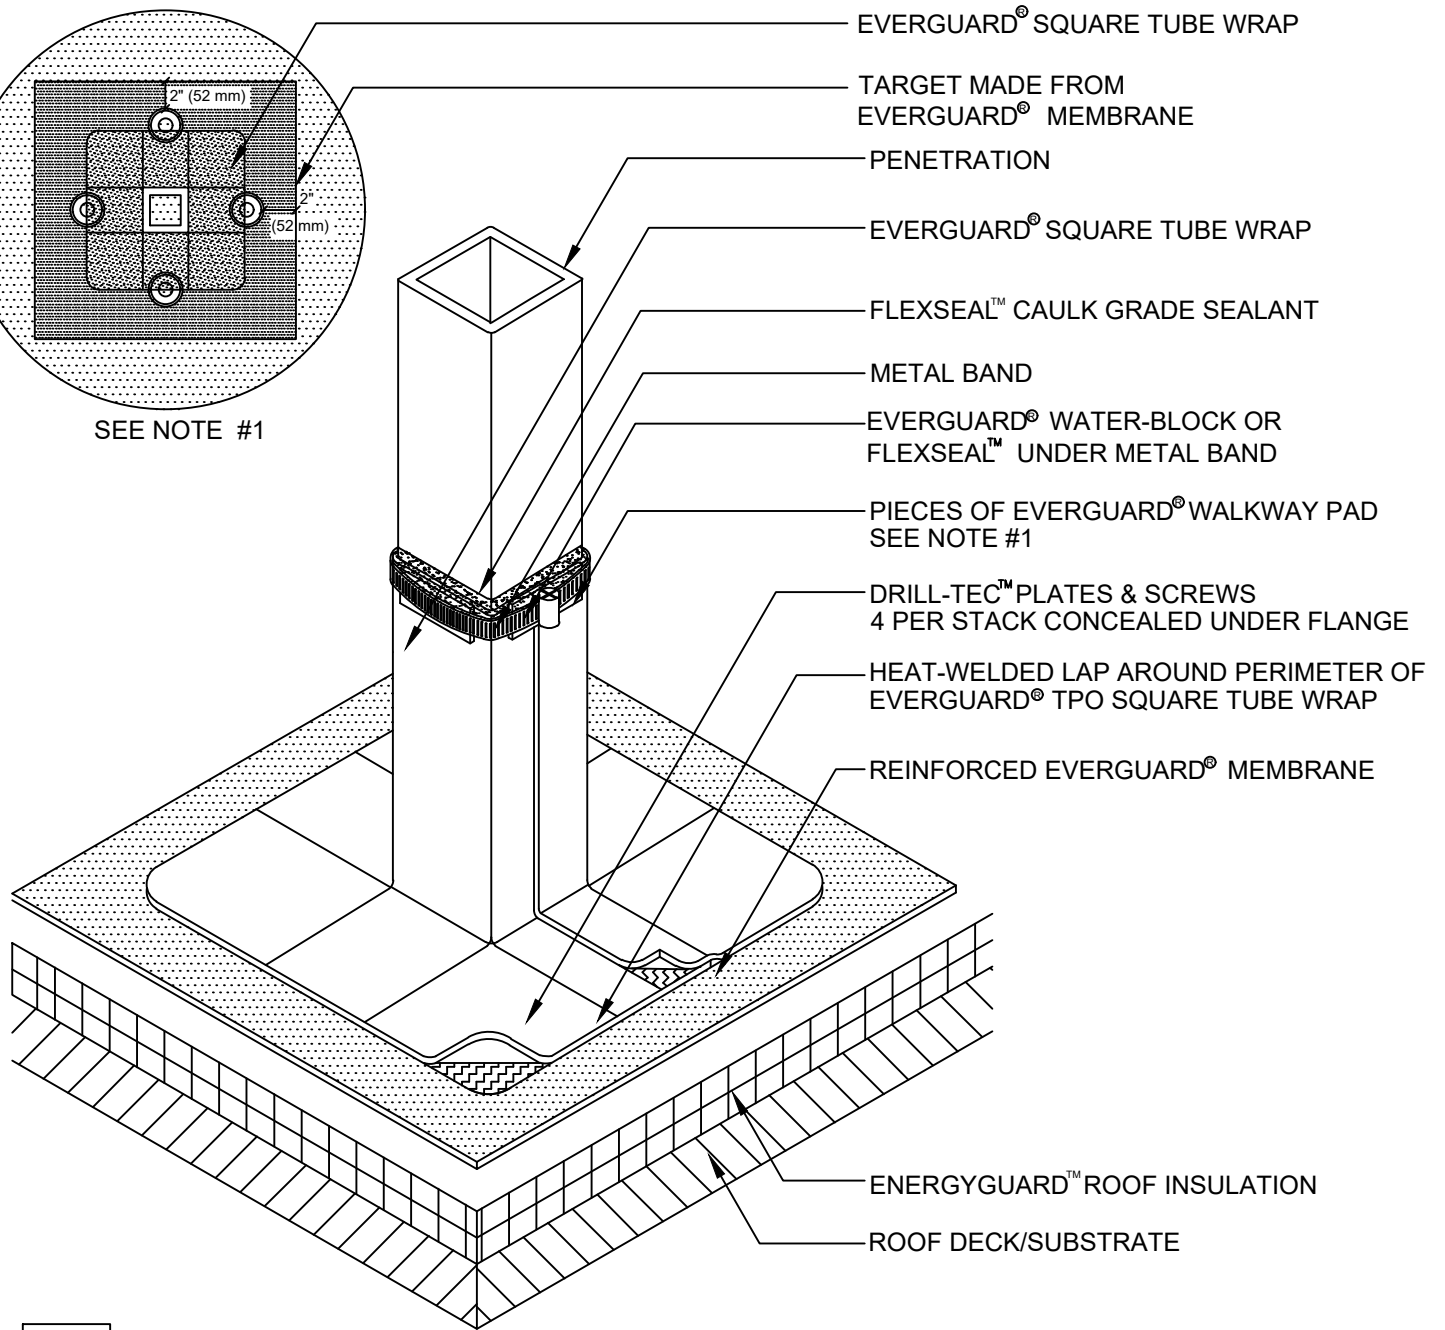

NOTE:

1. IF A TIGHTER FIT IS REQUIRED AT THE TOP OF THE WRAP, INSERT SLIVERS OF WALKWAY PAD BETWEEN THE BAND AND THE MEMBRANE ON ALL FOUR SIDES.
2. IF PLATES AND FASTENERS ENCROACH INTO THE SEAM AREA OF THE POCKET, THEN A TARGET MUST BE ADDED FIRST TO COVER FASTENERS.
3. 25 YEAR GUARANTEES AND ABOVE MUST USE EXTREME ACCESSORIES.
4. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO EVERGUARD® DETAIL 115).



**EverGuard**  
SINGLE PLY ROOFING SYSTEMS  
ROOF PENETRATION  
SERIES

DRAWING #  
**527**  
SCALE  
N.T.S.

**SQUARE TUBE WRAP DETAIL**

THIS DETAIL APPLIES TO:  
**ALL SYSTEMS**  
REVISION DATE  
12-12-17